


Constantly under pressure

Pressurized manifold

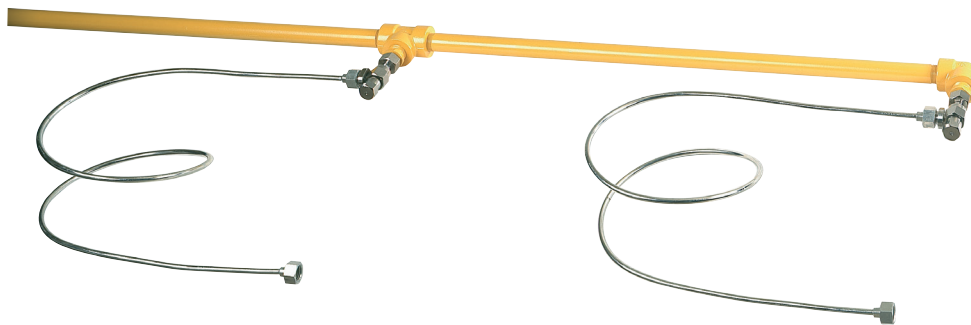

Constantly under pressure

Only a restricted amount of chlorine can be withdrawn from chlorine cylinders and chlorine drums at any one time. The max. possible flow rate using chlorine cylinders or chlorine drums is insufficient for many installations.

Manifolds represent one solution. These combine multiple chlorine flows and feed the system via a line. Supply is performed using either gaseous or fluid chlorine. A pressurized manifold connects all tanks forming a single pressure system so that chlorine is withdrawn simultaneously from all tanks.

Functions

- Throughput of up to 2600 kg Cl₂/h
- Consists of parts with 2 or 3 connections for chlorine tanks each
- For up to 8 chlorine tanks
- Made of anti-corrosion-coated steel
- Including flexible connection lines
- Including connection flanges, e.g. for mounting further manifolds
- Available as an option with auxiliary valves and corner valves

Technical data

Max. flow rate	Liquid chlorine	kg Cl ₂ /h	2600 (at 20°C and 1 m/s)
	Chlorine gas		400 (at 20°C and 10 m/s)
Pressure stage			PN40
Nominal width	Manifold		DN25
	Flexible connection line		DN6
Materials	Manifold		Coated plain steel
	Flexible connection line		Galvanically coated copper
	Auxiliary valve, corner valve		Bronze, Monel, PTFE
Weights	Cylinders	kg	approx. 4.5 (per connection)
	Drums		approx. 6 (per connection)
	Auxiliary valve, corner valve		approx. 0.6 each


Scope of delivery

The pressurized manifold is delivered including:

- Pressurized manifold (depending on the number of connections in sections) consisting of a manifold and flexible connection lines
- Flange connections (screws, nuts, U-washers and seals)
- Blind flange
- Pipe clamps with mounting hardware
- WAF 32 open-end spanner for operating the corner valves
- Optional: Auxiliary valve, corner valves

Dimensions


Manifold

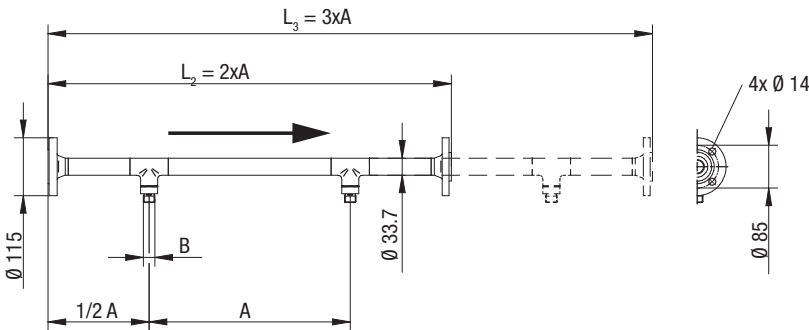


The length of the manifold is calculated from the number of connections for the flexible connection lines multiplied by the respective dimension A

Scale	Value	
A	With chlorine cylinders	400 mm
	With chlorine drums	1000 mm
B	BSP 5/8 (BS341)	
Input side flange	DN25 / PN40 with groove (according to EN 1092-1, Form D)	
Output side flange	DN25 / PN40 with spring (according to EN 1092-1, Form C)	


Flexible connection line

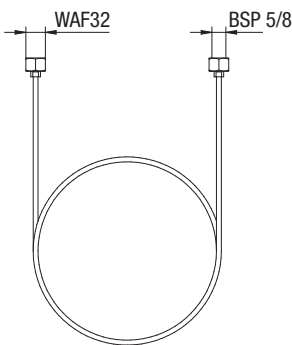


Corner valve

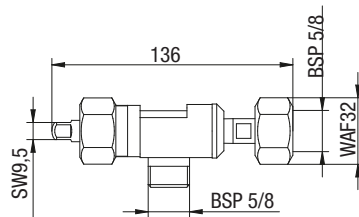

Auxiliary valve with YOKE connection

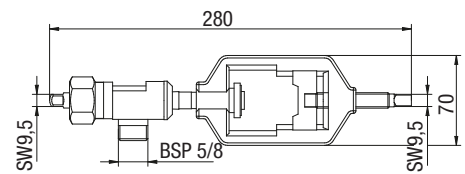


Auxiliary valve with union nut

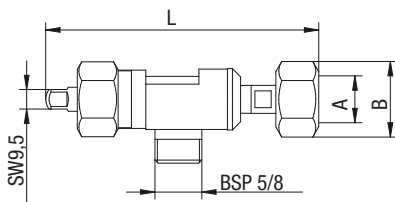

A Thread	Standard	B Width across flats	L
BSW 1"	DIN 477	WAF32	139 mm
BSP 5/8	BS 341	WAF32	136 mm
BSP 3/4	AS 2473	WAF32	145 mm
1.30" - 14 NGO	CGA V-1 (660)	WAF32	134 mm
BSW 1 1/4"	DIN 4676	WAF41	155 mm
M26 x 3	-	WAF32	146 mm

All dimensions in mm

Installation example

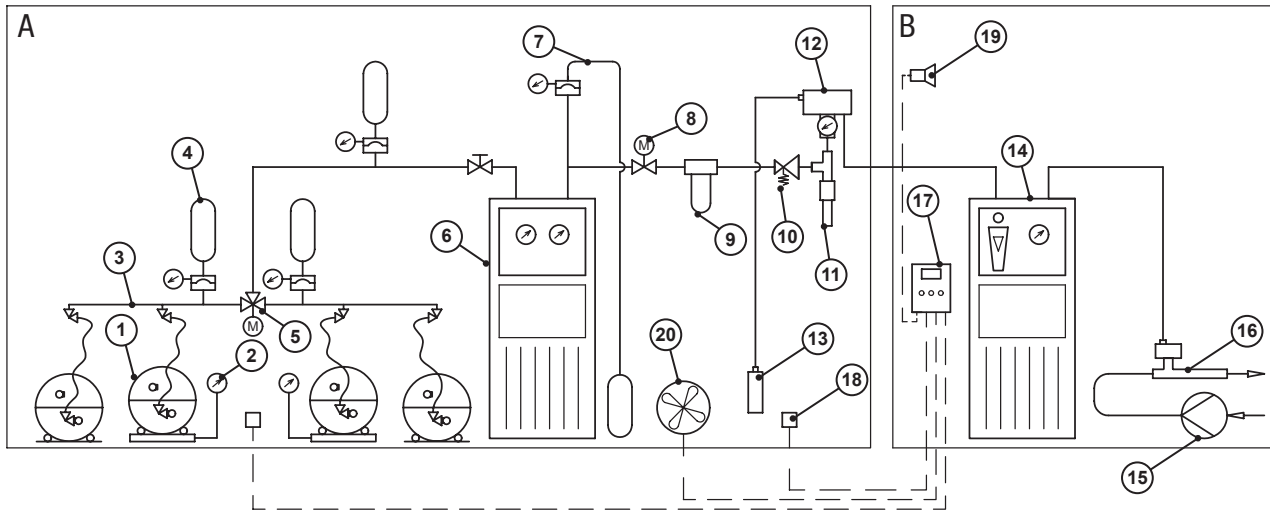

Item	Description
A	Room for the chlorine supply
B	Dosing device room
1	Chlorine barrel
2	Chlorine barrel scale
3	Pressurized manifold
4	Expansion system for piping
5	Changeover switch
6	Chlorine evaporator
7	Expansion system for chlorine evaporator
8	Automatic chlorine ball-valve
9	Chlorine gas filter

Item	Description
10	Pressure reducing valve
11	Moisture eliminator with heating collar
12	Vacuum regulator
13	Activated carbon cartridge
14	Dosing device
15	Motive water pump
16	Injector with non-return valve
17	Gas warning device
18	Gas sensor
19	Horn
20	Entrance port of the chlorine eliminator

Accessories




Catchpots with flange connection



Heating for catchpots

30 W, 120 V or 240 V, with 3 m cable without plug, with mounting material

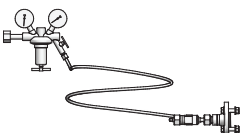

Nitrogen flushing device

(Pressure reducer with gauge, interconnection line and flange connection to manifold)

Product range

Lutz Pumpen GmbH
Postfach 1462
D-97864 Wertheim
www.lutz-pumpen.de

Product range

Lutz-Jesco GmbH
Postfach 100164
D-30891 Wedemark
www.lutz-jesco.de



Barrel and container pumps



Dosing pumps




Measuring and control equipment



Flow meters



Chlorinators

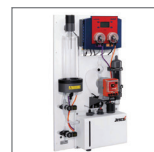

Disinfection



Double diaphragm pumps



Chemical centrifugal pumps



Standard plus



Centrifugal pumps



TECHNOPOL

Products for the disinfection of swimming pool water based on salt water electrolysis and domestic water technology



The Lutz-Jesco App for iPads and iPhone is available from the iTunes App Store. Further information on this can be found at www.lutz-jesco.com



Head Office
Lutz-Jesco GmbH
Am Bostelberge 19
30900 Wedemark
Germany

Tel.: +49 5130 5802-0
Fax: +49 5130 580268

E-mail: info@lutz-jesco.com
Website: www.lutz-jesco.de

Hungary
Lutz-Jesco Üzletég
Vasvári P. u. 9.
9024 Győr
Hungary

Tel.: +36 96 523046
Fax: +36 96 523047

E-mail: info@lutz-jesco.hu
Website: www.lutz-jesco.hu

Austria
Lutz-Jesco GmbH
Aredstraße 7/2
2544 Leobersdorf
Austria

Tel.: +43 2256 62180
Fax: +43 2256 6218062

E-mail: info@lutz-jesco.at
Website: www.lutz-jesco.at

Netherlands
Lutz-Jesco Nederland B.V.
Nijverheidstraat 14 C
2984 AH Ridderkerk
Netherlands

Tel.: +31 180 499460
Fax: +31 180 497516

E-mail: info@lutz-jesco.nl
Website: www.lutz-jesco.nl



Great Britain
Lutz-Jesco (GB) Ltd.
Gateway Estate
West Midlands Freeport
Birmingham B26 3QD
Great Britain

Tel.: +44 121 782 2662
Fax: +44 121 782 2680

E-mail: info@lutz-jesco.co.uk
Website: www.lutz-jesco.co.uk

USA
Lutz-JESCO America Corp.
55 Bermar Park
Rochester, N.Y. 14624
USA

Tel.: +1 585 426-0990
Fax: +1 585 426-4025

E-mail: mail@jescoamerica.com
Website: www.lutzjescoamerica.com

East Asia
Lutz-Jesco East Asia Sdn Bhd
6 Jalan Saudagar U1/16
Hicom Glenmarie Industrial Park
40150 Shah Alam/ Selangor
Malaysia

Tel.: +603 55692322
Fax: +603 55691322

E-mail: info@lutz-jescoasia.com
Website: www.lutz-jescoasia.com

Middle East
Lutz-Jesco Middle East FZE
P.O. Box 9614
SAIF-Free Zone Center
Sharjah
UAE

Tel.: +971 6 5572205
Fax: +971 6 5572230

E-mail: info@jescome.com
Website: www.jescome.com

