
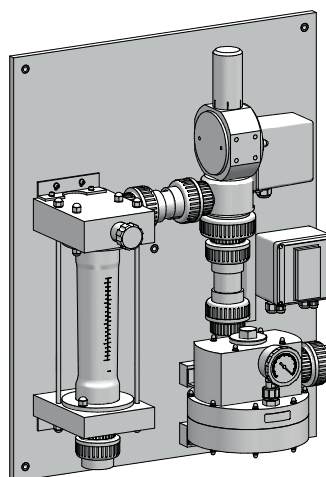


Chlorinator **C 2701** Operating instructions

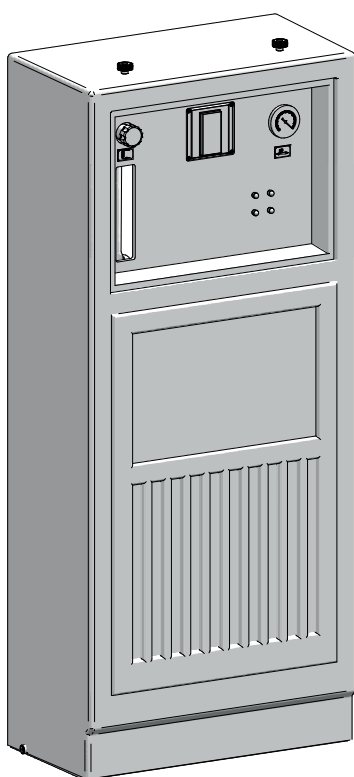

Read the operating manual!

The user is responsible for installation and operation related mistakes!

Table of Contents

1	Notes for the Reader	4	12	Maintenance	27
1.1	General non-discrimination	4	12.1	Maintenance intervals	27
1.2	Explanation of the signal words	4	12.2	Maintenance accessories	27
1.3	Explanation of the warning signs	4	12.3	Preparing the system for maintenance	27
1.4	Identification of warnings	4	12.4	Minor maintenance	28
1.5	Identification of action instructions	5	12.5	Maintenance on the flow meter	28
2	Safety	6	12.6	Maintenance on the electrical regulation valve	29
2.1	General warnings	6	12.7	Maintenance of the back-pressure regulator	29
2.2	Information about chlorine	6	12.8	Cleaning the vacuum meter	31
2.3	Hazards due to non-compliance with the safety instructions	6	12.9	Adjusting the backpressure regulator	31
2.4	Working in a safety-conscious manner	7	12.10	Finishing maintenance	32
2.5	Personal protective equipment	7	13	Troubleshooting	33
2.6	Personnel qualification	7	14	Spare parts	34
3	Intended use	9	14.1	Housing SL	34
3.1	Notes on product warranty	9	14.2	Module overview SL	36
3.2	Intended purpose	9	14.3	Overview of modules WL	38
3.3	Device revision	9	14.4	Flow meter	40
3.4	Prohibited dosing media	9	14.5	Back-pressure regulator	42
4	Product description	10	14.6	Vacuum meter	44
4.1	Scope of delivery	10	14.7	Maintenance sets	45
4.2	Design and function	10	15	EU Declaration of Conformity	46
4.3	Rating plate	12	16	Declaration of no objection	47
5	Technical data	13	17	Warranty claim	48
6	Dimensions	14	18	Index	49
7	Installation	15			
7.1	Installation location	15			
7.2	Installing the device	15			
7.3	Hydraulic installations	16			
7.4	Electrical installation	18			
7.5	Completing the installation	19			
7.6	Installation examples	20			
8	Control	22			
8.1	Controls	22			
8.2	Manual operation	23			
8.3	Automatic operation	23			
9	Commissioning	24			
9.1	Checking the vacuum system	24			
9.2	Turning on the device	24			
9.3	Adapting the power output	24			
10	Operation	25			
10.1	Setting the dosing quantity	25			
10.2	Shutting down in an emergency	25			
10.3	Test intervals	25			
11	Shutdown	26			
11.1	Short-term shutdown	26			
11.2	Long-term shutdown	26			
11.3	Disposal of old equipment	26			

1 Notes for the Reader

This operating manual contains information and behaviour rules for the safe and designated operation of the device.

Observe the following principles:

- read the entire operating instructions prior to inaugurating the device.
- Ensure that everyone who works with or on the device has read the operating manual and follows it.
- Maintain the operating manual throughout the service life of the device.
- Pass the operating manual on to any subsequent owner of the device.

1.1 General non-discrimination

In this operating manual, only the male gender is used where grammar allows gender allocation. The purpose of this is to make the text easy to read. Men and women are always referred to equally. We would like to ask female readers for understanding of this text simplification.

1.2 Explanation of the signal words






Different signal words in combination with warning signs are used in this operating manual. Signal words illustrate the gravity of possible injuries if the risk is ignored:

Signal word	Meaning
DANGER	Refers to imminent danger. Ignoring this sign may lead to death or the most serious injuries.
WARNING	Refers to a potentially hazardous situation. Failure to follow this instruction may lead to death or severe injuries.
CAUTION	Refers to a potentially hazardous situation. Failure to follow this instruction may lead to minor injury or damage to property.
PLEASE NOTE	Refers to a danger which, if ignored, may lead to risk to the machine and its function.

Tab. 1: Explanation of the signal words

1.3 Explanation of the warning signs

Warning signs represent the type and source of a danger:

Warning sign	Type of danger
	Danger to life from chlorine poisoning
	Danger to life due to electric shock
	Danger of explosions
	General danger zone
	Danger of damage to machine or functional influences

Tab. 2: Explanation of the warning signs

1.4 Identification of warnings

Warnings are intended to help you recognise risks and avoid negative consequences.

This is how warnings are identified:

Warning sign	SIGNAL WORD
Description of danger. Consequences if ignored. ⇒ The arrow signals a safety precaution to be taken to eliminate the danger.	

1.5 Identification of action instructions

This is how pre-conditions for action are identified:

- ✓ Pre-condition for action which must be met before taking action.
- ✕ A resource such as a tool or auxiliary materials required to perform the operating instructions.

This is how instructions for action are identified:


- ➔ Separate step with no follow-up action.
- 1. First step in a series of steps.
- 2. Second step in a series of steps.
 - ▶ Result of the above action.
- ✓ **Action completed, aim achieved.**


2 Safety


2.1 General warnings


The following warnings are intended to help you eliminate the dangers that can arise while handling the device. Risk prevention measures always apply regardless of any specific action.

Safety instructions warning against risks arising from specific activities or situations can be found in the respective sub-chapters.

	DANGER
<p>Danger to life from chlorine poisoning!</p> <p>Chlorine is poisonous. In severe cases, breathing in chlorine may lead to death. It irritates the eyes, the respiratory system and the skin.</p> <ul style="list-style-type: none"> ⇒ Use sufficient personal protective equipment. ⇒ When carrying out any work on the system, use a respirator mask with a Type B gas filter that complies with EN 14387. ⇒ Always comply with the accident prevention regulations that apply at the place of use. ⇒ Get rid of leaks without delay. You must get rid of even very minor leaks without delay. Together with the humidity, chlorine forms hydrochloric acid and corrosion results in rapidly increasing leakage. ⇒ Use only chlorine-resistant seals. ⇒ Only use seals once. Reusing them leads to leaks. 	

	DANGER
<p>Danger to life from chlorine poisoning!</p> <p>Chlorinators without gas warning devices are an increased safety risk, since it is not possible to detect escaping chlorine gas in good time or at all.</p> <ul style="list-style-type: none"> ⇒ Install a gas warning device. 	

	WARNING
<p>Increased risk of accidents due to insufficient qualification of personnel!</p> <p>Chlorinators and their accessories must only be installed, operated and maintained by personnel with sufficient qualifications. Insufficient qualification will increase the risk of accidents.</p> <ul style="list-style-type: none"> ⇒ Ensure that all action is taken only by personnel with sufficient and corresponding qualifications. ⇒ Prevent access to the system for unauthorised persons. 	

	PLEASE NOTE
<p>Damage to the plant due to the formation of hydrochloric acid</p> <p>Chlorine gas is highly hygroscopic. This means that humidity enters the system at any open connection on devices or pipes, which results in the formation of hydrochloric acid and contamination. thus inevitably causing damage to the units.</p> <ul style="list-style-type: none"> ⇒ Keep all connections (including in the vacuum system and on all devices not currently in use) closed at all times. 	


2.2 Information about chlorine

Chlorine is a hazardous substance. The chemical element chlorine is a greenish-yellow, toxic gas with a pungent odour, which can be detected in the air at concentrations below 1 ppm (= 1 ml/m³).

Chlorine is 2.5 times heavier than air and accumulates at ground level.

Chlorine is extremely toxic for water organisms. The reason for the toxicity of chlorine is its extraordinary reactivity. It reacts with animal and vegetable tissue and thus destroys it.

Air with a chlorine gas content of 0.5 – 1 % leads to a quick death in mammals and humans, as it attacks the respiratory tract and the pulmonary alveolus (formation of hydrogen chloride or hydrochloride acid).

	PLEASE NOTE
<p>Faults due to insufficient chlorine quality</p> <p>Impurities in the chlorine gas form deposits in devices and valves and can attack the components chemically. This can lead to malfunctions.</p> <ul style="list-style-type: none"> ⇒ Only use technically pure chlorine that meets the following requirements: <ul style="list-style-type: none"> - Mass content of chlorine at least 99.5 % - Water content max. 20 mg/kg <p>Chlorine that complies with EN 937 meets these requirements</p>	

2.3 Hazards due to non-compliance with the safety instructions

Failure to follow the safety instructions may endanger not only persons, but also the environment and the device.

The specific consequences can be:

- Failure of important functions of the device and of the corresponding system
- Failure of required maintenance and repair methods
- Danger to persons
- Danger to the environment caused by substances leaking from the system

2.4 Working in a safety-conscious manner

Besides the safety instructions specified in this operating manual, further safety rules apply and must be followed:

- Accident prevention regulations
- Safety and operating provisions
- Safety regulations on handling hazardous substances
- Environmental protection provisions
- Applicable standards and legislation

2.5 Personal protective equipment

Based on the degree of risk posed by the dosing medium and the type of work you are carrying out, you must use corresponding protective equipment. Read the Accident Prevention Regulations and the Safety Data Sheets to the dosing media find out what protective equipment you need.

As a minimum, the following protective equipment is recommended:



Protective mask



protective clothing




Protective gloves



safety shoes

Corresponding protective equipment must be used during these tasks:

- Commissioning
- All work on gas-bearing sections of the plant
- Changing the chlorine gas containers
- Shut-down
- Maintenance work
- Disposal

	DANGER
<p>Danger to life from chlorine poisoning!</p> <p>If chlorine gas escapes, a filter mask is ineffective, since it is not a self-contained breathing apparatus.</p> <p>⇒ If chlorine gas escapes, wear a Type 2 self-contained breathing apparatus that complies with EN 137.</p>	

2.6 Personnel qualification

Any personnel who work on the device must have appropriate special knowledge and skills.

Anybody who works on the device must meet the conditions below:

- Attendance at all the training courses offered by the owner

- Personal suitability for the respective activity
- Sufficient qualification for the respective activity
- Training in how to handle the device
- Knowledge of safety equipment and the way this equipment functions
- Knowledge of this operating manual, particularly of safety instructions and sections relevant for the activity
- Knowledge of fundamental regulations regarding health and safety and accident prevention

All persons must generally have the following minimum qualification:

- Training as specialists to carry out work on the device unsupervised
- Sufficient training that they can work on the device under the supervision and guidance of a trained specialist

These operating instructions differentiate between these user groups:

2.6.1 Specialist staff

Thanks to their professional training, knowledge, experience and knowledge of the relevant specifications, specialist staff are able to perform the job allocated to them and recognise and/or eliminate any possible dangers by themselves.

2.6.2 Trained electricians

Due to their professional training, knowledge and experience as well as knowledge of specific standards and provisions, trained electricians are able to do the electrical work assigned to them and to recognise and avoid any potential dangers by themselves.

They are specially trained for their specific working environment and are familiar with relevant standards and provisions.

They must comply with the legally binding regulations on accident prevention.

2.6.3 Trained persons

Trained persons have received training from the operator about the tasks they are to perform and about the dangers stemming from improper behaviour.

Trained persons have attended all trainings offered by the operator.

2.6.4 Personnel tasks

In the table below you can check what qualifications are the pre-condition for the respective tasks. Only people with appropriate qualifications are allowed to perform these tasks!

Qualification	Activities
Specialist staff	<ul style="list-style-type: none">■ Transportation■ Assembly■ Hydraulic installations■ Commissioning■ Taking out of operation■ Fault rectification■ Maintenance■ Repairs■ Disposal
Trained electricians	<ul style="list-style-type: none">■ Electrical installation■ Rectifying electrical faults■ Electrical repairs
Trained persons	<ul style="list-style-type: none">■ Storage■ Control

Tab. 3: Personnel qualification

3 Intended use

3.1 Notes on product warranty

Any non-designated use of the device can impair its function and the protection provided. This leads to invalidation of any warranty claims!

Please note that liability is on the side of the user in the following cases:

- The device is operated in a manner which is not consistent with these operating instructions, particularly safety instructions, handling instructions and the section "Intended Use".
- Information on usage and environment (see section 5 „Technical data“ on page 13) is not adhered to.
- If people operate the device who are not adequately qualified to carry out their respective activities.
- No original spare parts or accessories of Lutz-Jesco GmbH are used.
- Unauthorised changes are made to the device.
- The user uses different dosing media than those indicated in the order.
- Maintenance and inspection intervals are not adhered to as required or not adhered to at all.
- The device is commissioned before it or the corresponding system has been correctly and completely installed.
- Safety equipment has been bridged, removed or made inoperative in any other way.

3.2 Intended purpose

The device is exclusively intended for the dosing of a chlorine dioxide solution in a vacuum procedure. It serves the adjustment and display of the dosing quantity.

It may only be used with technically pure chlorine with a minimum mass content of 99.5 %

3.3 Device revision

This operating manual applies to the following devices:

Device	Month / year of manufacture
Chlorinator C 2701	06/2021 onwards

Tab. 4: Device revision

The production date is indicated on the rating plate.

3.4 Prohibited dosing media

The device must not be used for the following media and substances:

- Any gases except chlorine gas
- Media with a pressure not less than the atmospheric pressure
- Chlorine of insufficient quality

4 Product description

4.1 Scope of delivery

Please compare the delivery note with the scope of delivery. The following items are part of the scope of delivery:

- Dosing device with flow meter, manual adjustment valve, backpressure regulator and vacuum meter. Optionally available with an automatic regulation valve and a signal converter.
- Installation material for wall mounting or fixing to the floor.
- Operating instructions

4.2 Design and function

4.2.1 Structure of a vacuum dosing system

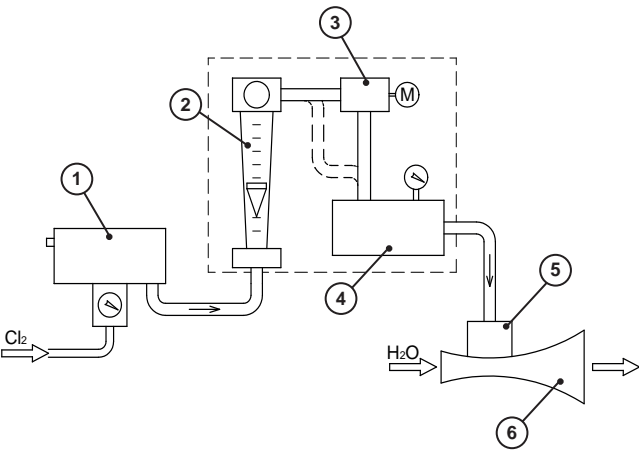


Fig. 1: Structure of a vacuum dosing system

The chlorine gas leaves the chlorine tank with positive pressure. The vacuum regulator (1) only permits the chlorine to flow if a vacuum at the output of the device generates suction. A chlorine leak is not possible following a line fracture behind the vacuum regulator.

The dosing device consists of a flow meter (2) with a manual regulation valve, usually an electrically-actuated regulation valve (3) and a pressure regulator (4).

The injector (6) generates the vacuum in accordance with the Venturi effect and mixes the chlorine gas in the motive water flow. Chlorine dosing is aborted immediately following water stand still. The non-return valve (5) prevents water from entering the dosing devices.

4.2.2 Structure of the device

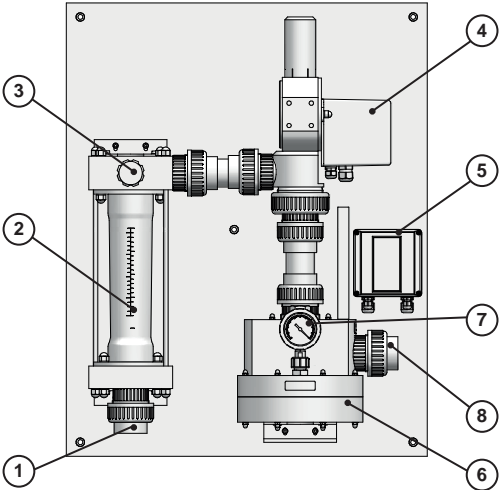


Fig. 2: Structure C 2701/WL

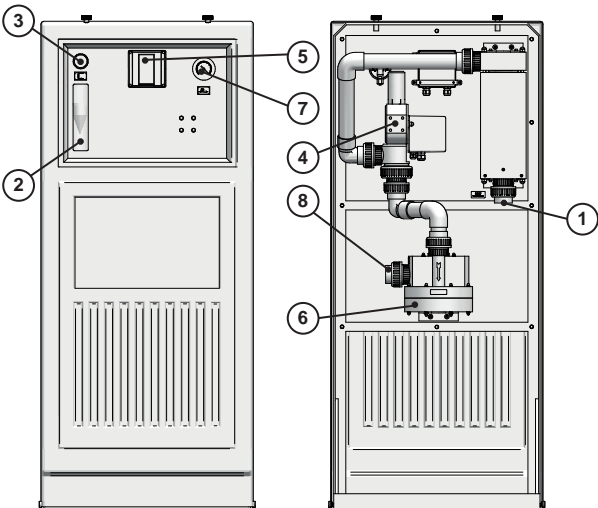


Fig. 3: Structure C 2701/SL

No.	Description
1	Input
2	Flow meter
3	Manual dosing valve
4	Electrical regulation valve (optional)
5	Signal converter (optional)
6	Back-pressure regulator
7	Vacuum meter
8	Output

Tab. 5: Components of the device

4.2.3 Functions of the device

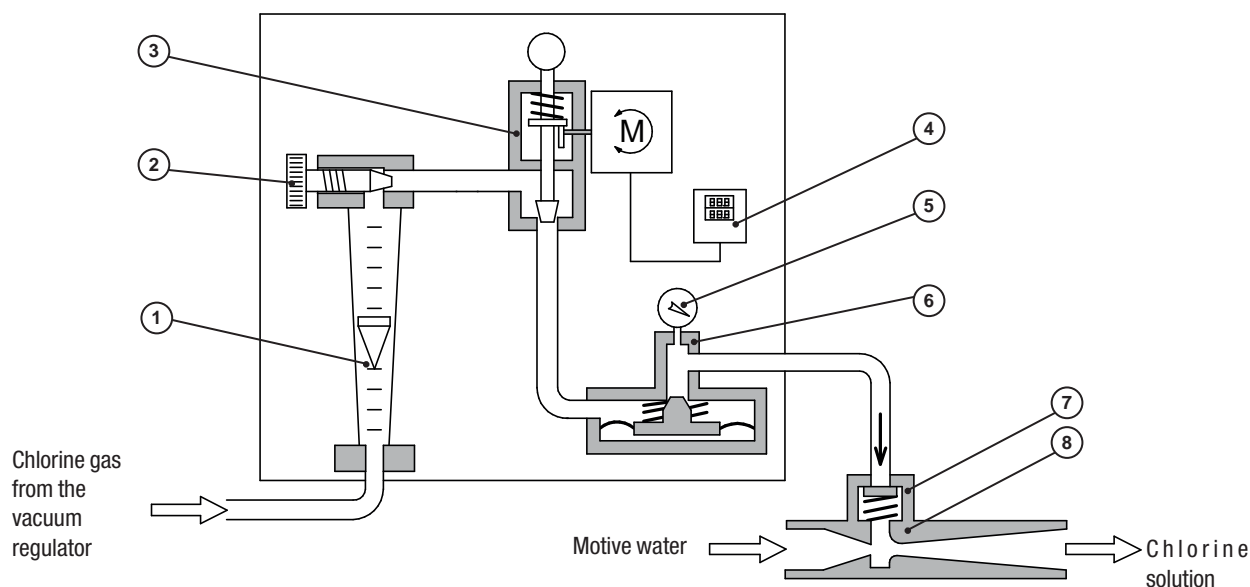


Fig. 4: Functional diagram C 2701

As the dosing device is connected to a vacuum regulator, chlorine can only flow if the injector (8) generates a sufficient vacuum.

The float in the glass tube of the flow meter (1) indicates the current dosing quantity. It is set on the manual valve (2).

The majority of dosing devices are fitted with an electrically-actuated regulation valve (3) with which the dosing quantity can be adjusted automatically. In a number of cases, an additional signal converter (4) is provided, with which the dosing device can be easily adjusted minimally to the usage process.

The backpressure regulator (6) ensures a constant vacuum on the regulation valve and enables consistent dosing. Should the vacuum generated by the injector become stronger, the diaphragm disc moves upwards and reduces the flow cross-section. This produces a constant vacuum between the regulation valve and the backpressure regulator. This is displayed on the vacuum meter (5). A contact vacuum meter is optionally available, with which the injector function can be electrically monitored.

The chlorine is mixed with water in the injector (8) and flows into the metering point as a chlorine solution. Should the system come to a standstill, the non-return valve (7) protects the dosing device from water penetration.

4.3 Rating plate

The rating plate contains information on the safety and functional method of the product. The rating plate must be kept legible for the duration of the service life of the product.

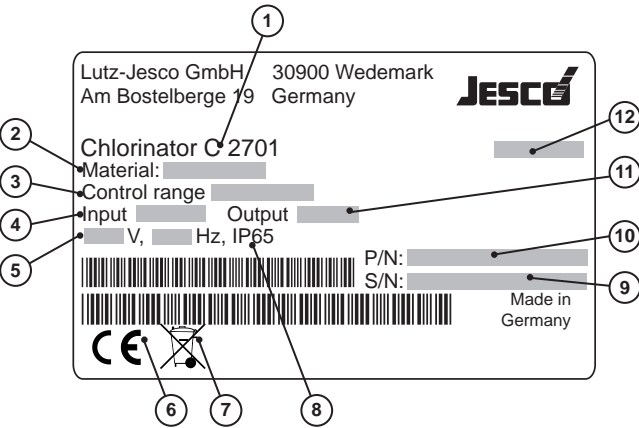


Fig. 5: Rating plate C 2701

No.	Description
1	Product name
2	Components coming into contact with the media
3	Control range
4	Control signal from the electrical regulation valve
5	Voltage supply
6	Label showing conformity with applicable European directives
7	WEEE label
8	Protection class (IP)
9	Serial number
10	Part number
11	Feedback signal from the electrical regulation valve
12	Month/year of manufacture

Tab. 6: Rating plate

5 Technical data

Information			Value
Dosage range			40 / 60 / 120 / 200 kg/h Cl ₂
Operating vacuum		mbar	-100
Required injector vacuum		mbar	-250
Adjustable flow		%	0 – 100
Flow meter	Length	mm	300
	Accuracy		± 2 % of final scale reading
	Scale ratio		1:20
	Material		Glass
Vacuum meter	Measuring range	bar	-1 to 0
	Size	mm	Ø63
	Accuracy		± 2.5 % of final scale reading
	Load capacity of optional contacts		50 V / 0.5 A / 10 W
Material in contact with the media	Plastics		PVC, PVDF
	Springs		Hastelloy
	Seals, diaphragms		FPM
Weight with electrical regulation valve and signal converter	Wall device	kg	32 approx.
	Free standing cabinet	kg	58 approx.
Ambient temperature		°C	0 – 40 (no direct sunlight)
Max. air humidity		%	90 non condensing

Tab. 7: Technical data subsequent dosing device

Technical data for the electrical regulation valve and signal converter

See separate data sheets.

6 Dimensions

All dimensions in mm

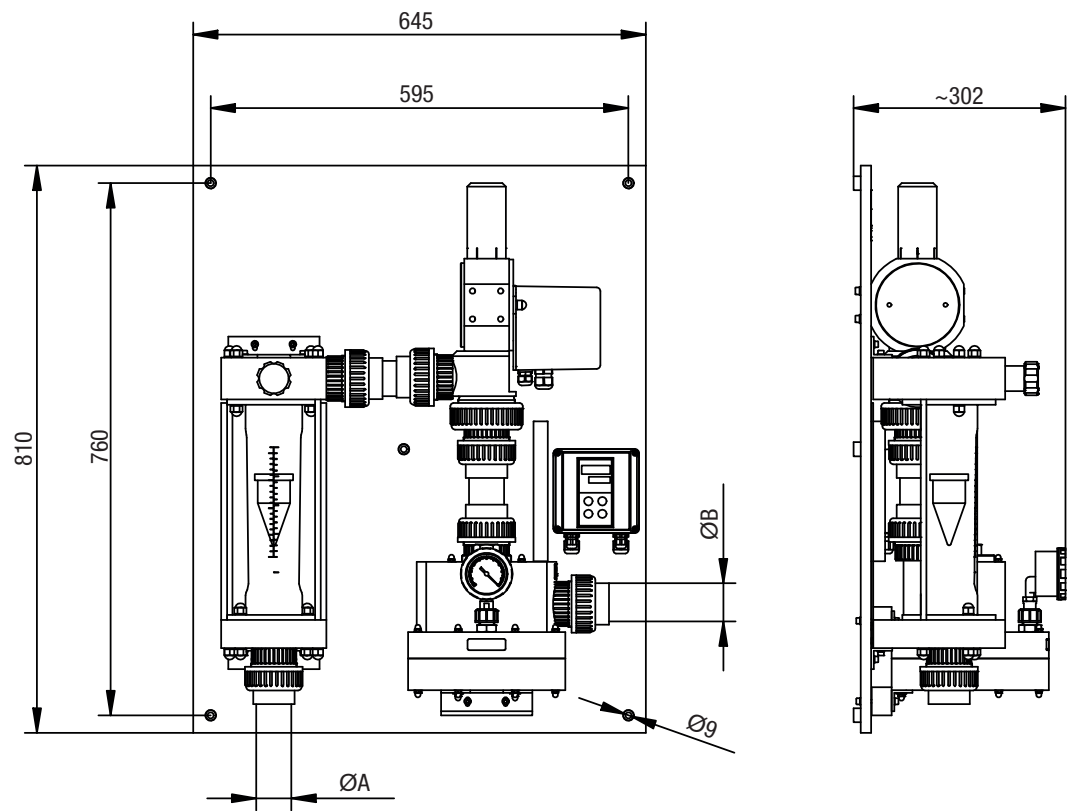


Fig. 6: Dimensioned drawing C 2701/WL

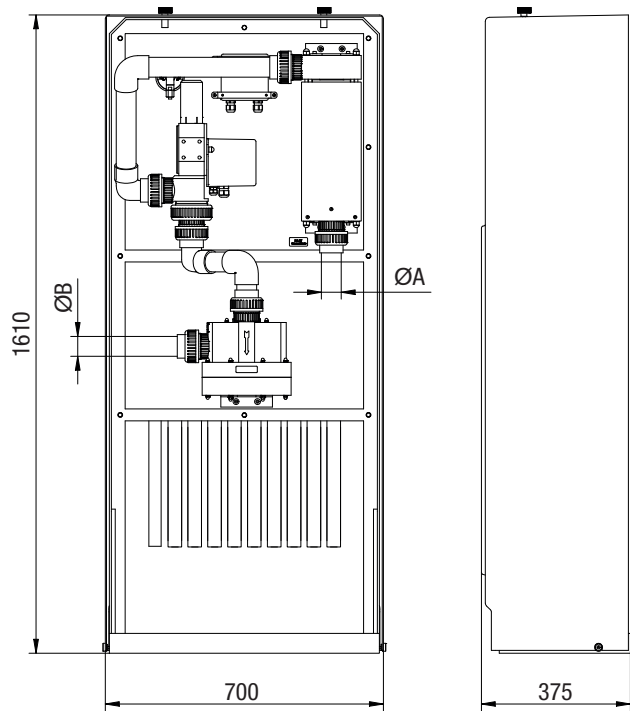



Fig. 7: Dimensioned drawing C 2701/SL

Power output	Input ØA and Output ØB
up to 60 kg/h	PVC screw connection DN32/Ø40
up to 200 kg/h	PVC screw connection DN40/Ø50

Tab. 8: Hydraulic connections

7 Installation




DANGER

Danger to life from chlorine poisoning!

Chlorinators without gas warning devices are an increased safety risk, since it is not possible to detect escaping chlorine gas in good time or at all.

⇒ Install a gas warning device.




DANGER

Danger to life through explosions!

When using dosing devices without ATEX certification in a potentially explosive area, explosions can occur that result in fatal injuries.

⇒ Never use the device in potentially explosive areas.




WARNING

Increased risk of accidents due to insufficient qualification of personnel!

Chlorinators and their accessories must only be installed, operated and maintained by personnel with sufficient qualifications. Insufficient qualification will increase the risk of accidents.

⇒ Ensure that all action is taken only by personnel with sufficient and corresponding qualifications.

⇒ Prevent access to the system for unauthorised persons.



PLEASE NOTE

Damage to the system due to incorrect installation

The failure to observe installation instructions (e.g. use of unsuitable tools, incorrect torque) can damage the system parts.

⇒ Use suitable tools.

⇒ Note the specified torque.

7.1 Installation location

The dosing device is usually installed together with the injectors in the dosing device room. We do not recommend installation in the same room as the chlorine gas supply.

The room must fulfil the following requirements:

- Secured against access by unauthorised persons
- Protected against weather conditions
- Frost-free
- Permissible ambient temperature adhered to (see Section 5 "Technical data" on page 13)
- Room of sufficient size to allow trouble-free assembly as well as inspection and maintenance of the device at all times
- Electrical connection given
- Room can be ventilated well
- Room complies with the locally valid prescriptions

7.2 Installing the device

7.2.1 Installing the wall device

The wall device must be installed perpendicularly to the wall surface in a way that makes it easily accessible to the operator. The flow meter should be mounted at approx. eye-level.

Precondition for action:

- ✓ A flat wall
- ✓ The mounting material is suitable for the wall.

Resources required:

- ✗ Water level
- ✗ Drill
- ✗ 2 open-end spanners AF 13

Perform the following working steps:

1. Hold the device against the wall and align it so that the flow meter is vertical.
 2. Mark the mounting point on the wall.
 3. Drill in the marked holes and insert the rawlplug.
 4. Screw in the stair bolts (1) a into the rawlplug until the wooden thread seals with the wall surface.
 5. Place a nut (2) and washer (3) on every screw.
 6. Slide the wall panel (4) on the stair bolts.
 7. Place a washer (5) and a cap nut (6) on every screw.
 8. Insert the nuts (2 + 6) in such a way that the wall panel is held level and voltage-free.
 9. Tighten the nuts.
- ✓ **The device is fitted on the wall.**

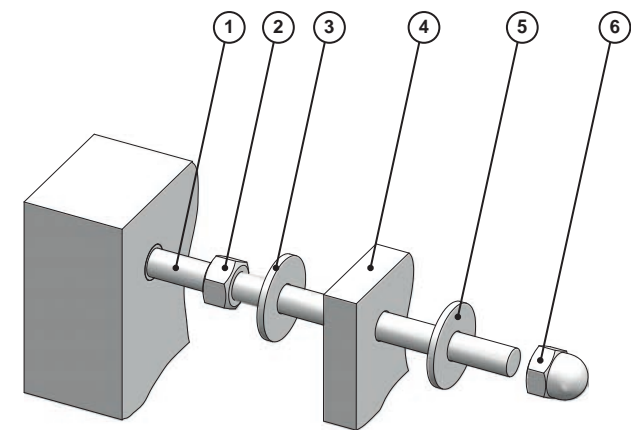


Fig. 8: Fitting the wall panel

7.2.2 Installing the cabinet

The cabinet is set up and installed on a level floor; often on a slightly-raised base. The device must be accessible for maintenance work from the rear.

Precondition for action:

- ✓ The floor is level.
- ✓ The mounting material is suitable for the wall.

Resources required:

- ✂ Drill
- ✂ Ring spanner AF 13

Perform the following working steps:

1. Remove the cover from the device (see fig. 9)
 2. Place the device in the desired position. Ensure that the frame fits well and does not wobble.
 3. Mark the anchor points on the floor and remove the device.
 4. Drill in the marked holes and insert the rawlplug.
 5. Return the device and screw it to the floor on all anchor points (see Fig. 10).
 6. Return the cover (6).
- ✓ **The device is fitted on the floor.**

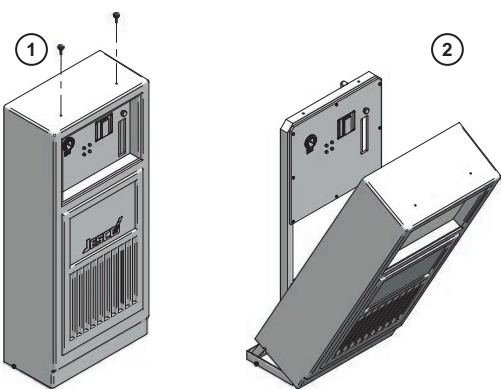


Fig. 9: Opening the cabinet

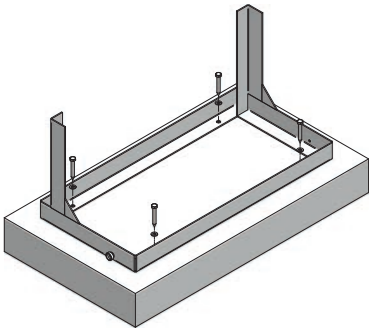


Fig. 10: Fixing the cabinet

7.3 Hydraulic installations

PVC-U pipes are used as vacuum lines.

The following table indicates the required line sizes. Where necessary, the long distance can be installed in a large nominal width and only the shorter sections directly on the devices are installed in the nominal width of the devices.

Position	Meaning
1	Vacuum regulator
2	Dosing device
3	Ejector
L _A -L _D	Lines on the device connection each approx. 0.5m in the connection nominal width
L ₁	Line in the nominal width in accordance with table 10
L ₂	Line in the nominal width in accordance with table 11

Tab. 9: Long vacuum line

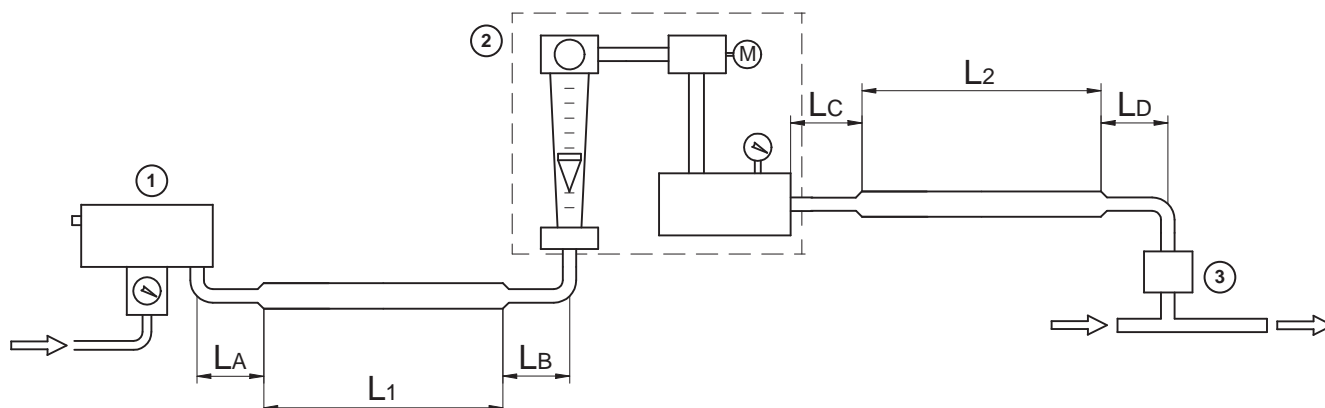


Fig. 11: Long vacuum lines

Line between the vacuum regulator and dosing device

The following nominal widths are recommended for the vacuum line (pressure loss max. 25 bar, calculated at 0.9 bar (a) with 4x90° angles):

Mass flow of chlorine	L ₁ : Length of the vacuum line between the vacuum regulator and the dosing device					
	5 m	10 m	20 m	30 m	50 m	100 m
40 kg/hr	DN20	DN25	DN25	DN32	DN32	DN40
60 kg/hr	DN25	DN32	DN32	DN32	DN40	DN40
80 kg/hr	DN32	DN32	DN32	DN40	DN40	DN50
120 kg/hr	DN32	DN40	DN40	DN40	DN50	DN50
200 kg/hr	DN40	DN50	DN50	DN50	DN65	DN65
300 kg/hr	DN50	DN65	DN65	DN65	DN65	DN80
400 kg/hr	DN65	DN65	DN65	DN65	DN80	DN80

Tab. 10: Recommended nominal width between the vacuum regulator and dosing device

If the line is to supply multiple dosing devices, the line should be calculated for the total of the consumption volume.

Line between the dosing device and injector

The following nominal widths are recommended for the vacuum line (pressure loss max. 25 bar, calculated at 0.75 bar (a) with 4x90° angles):

Mass flow of chlorine	L ₂ : Length of the vacuum line between the dosing device and the injector					
	5 m	10 m	20 m	30 m	50 m	100 m
40 kg/hr	DN25	DN25	DN25	DN32	DN32	DN40
60 kg/hr	DN25	DN32	DN32	DN32	DN40	DN40
80 kg/hr	DN32	DN32	DN40	DN40	DN40	DN50
120 kg/hr	DN40	DN40	DN40	DN50	DN50	DN65
200 kg/hr	DN50	DN50	DN50	DN65	DN65	DN65

Tab. 11: Recommended nominal width between the dosing device and injector



The recommended nominal width of the vacuum line to the injector is somewhat larger than that between the vacuum regulator and the dosing device, as the chlorine here has expanded a little greater.

Service valve

If multiple dosing devices are connected in parallel, every device should be installed with valves so that the other devices can be kept operational during servicing work.

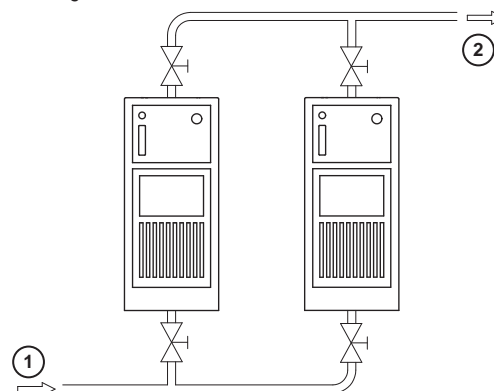


Fig. 12: Installation with service valves

No.	Meaning
1	from the vacuum regulator
2	to the ejector

Tab. 12: Installation with service valves

7.3.1 Making the PVC seal connection

Precondition for action:

- ✓ The device is installed.
- ✓ The vacuum line is fixed with sufficient pipe clamps and meets the connection in an un-tensioned state.
- ✓ All parts are clean and dry.
- ✓ The transport protection on the connection has been removed.

Resources required:

- ✂ Pipe cutter
- ✂ File or chamfer tool
- ✂ PVC adhesive and cleaning agent
- ✂ Non-fuzzing paper towels

Perform the following working steps:

1. Cut the PVC pipe at right angles. Make a chamfer on the pipe exterior (approx. 3mmx20°).
2. Clean the pipe and the bushing with the cleaning agent recommended by the manufacturer of the adhesive.
3. Glue the pipe in the connection. Follow the instructions on the PVC adhesive.

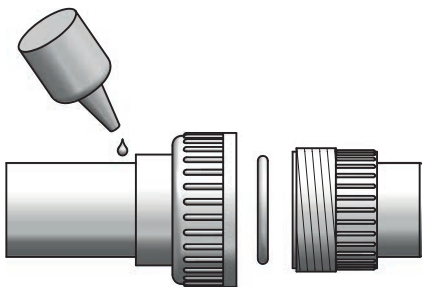


Fig. 13: Making the PVC seal connection

4. Mount the connection on the device. Ensure that the O-ring is fitted.
 5. Tighten the union nut by hand.
 6. Allow the bond to harden for at least 3 hours prior to the leak test.
- ✓ **PVC seal connection made.**

7.4 Electrical installation



DANGER

Mortal danger from electric shock!

Improperly installed or damaged components in the electronics installation can cause injury.

- ⇒ Ensure that all work on the electrical installation is performed by a qualified electrician.
- ⇒ Ensure that all work on the electrical installation is performed in a de-energised state.
- ⇒ Ensure that the power supply is secured with a fault current protective circuit.
- ⇒ Replace damaged cables or components without delay.

7.4.1 Electrical regulation valve

The electrical regulation valve is optional. Connection is made in accordance with the instructions either to the regulation valve or the servomotor.

7.4.2 Contact gauge

The vacuum meter is optional.

7.4.2.1 Connect the contact vacuum meter

Comply with the specifications to contact load capacity (see section 5 Technical data on page 13). The electrical connection is made at the terminal box integrated in the dosing device.

Perform the following working steps:

1. Open the terminal box by applying lateral pressure to the handle on the hinge. A tool is not required.
2. Mount the cable screw connection (appropriate size) to the cable cross-section.
3. Guide the cables into the terminal box and connect the cables using the clamps included in the scope of delivery.
4. Tighten the cable screw connections and close the terminal box to guarantee the IP protection class of the system.

- ✓ **Contact vacuum meter connected.**

Pressure gauge type	Cable colours	
Pressure gauge with 1 contact	White - brown	
Pressure gauge with 2 contacts	Contact no. 1 (switches with a strong vacuum)	White - brown
	Contact no. 2 (switches with a weak vacuum)	Yellow - green

Tab. 13: Cable assignments contact pressure gauge

7.4.2.2 Switch point of the contact vacuum meter adjusted.

Usually, the following situations are signalled according to the system configuration:

Situation	Possible cause	Recommended switch point
Insufficient vacuum	Fault on the injector	-0.2 bar
Vacuum too strong	Fault in the chlorine supply	-0.7 bar

Tab. 14: Functions of the contact vacuum meter

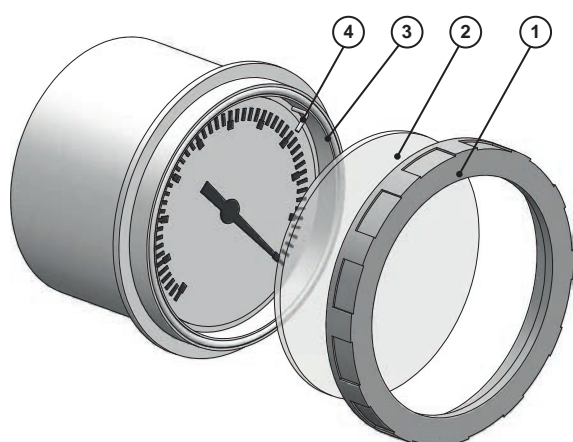


Fig. 14: Adjusting the switch point

Perform the following working steps:

1. Remove the transparent lid (2) from the contact vacuum meter. To do so, unscrew the outside ring (1) from the device. Observe the seal (3)
2. Move the red marking (4) on the desired switch point.
3. Refit the transparent lid and tighten the ring nut by hand. Ensure the correct position of the seal.

✓ **Switch point of the contact gauge adjusted.**

7.4.3 Signal converter

The signal converter is optional, offered for use only with a 230 V / 4 – 20 mA control valve. The connection is made in accordance with a separate set of instructions. As delivered, the connection between the control valve and the signal converter is already complete.

7.5 Completing the installation

The cable screw connections must be tightened and all housings closed after assembly in order to ensure the IP protection class of the installation.

Any paint coverings damaged during assembly must be repaired to prevent corrosion from an aggressive atmosphere.

All union nuts on the screw connections of the piping are tightened by hand.

7.6 Installation examples

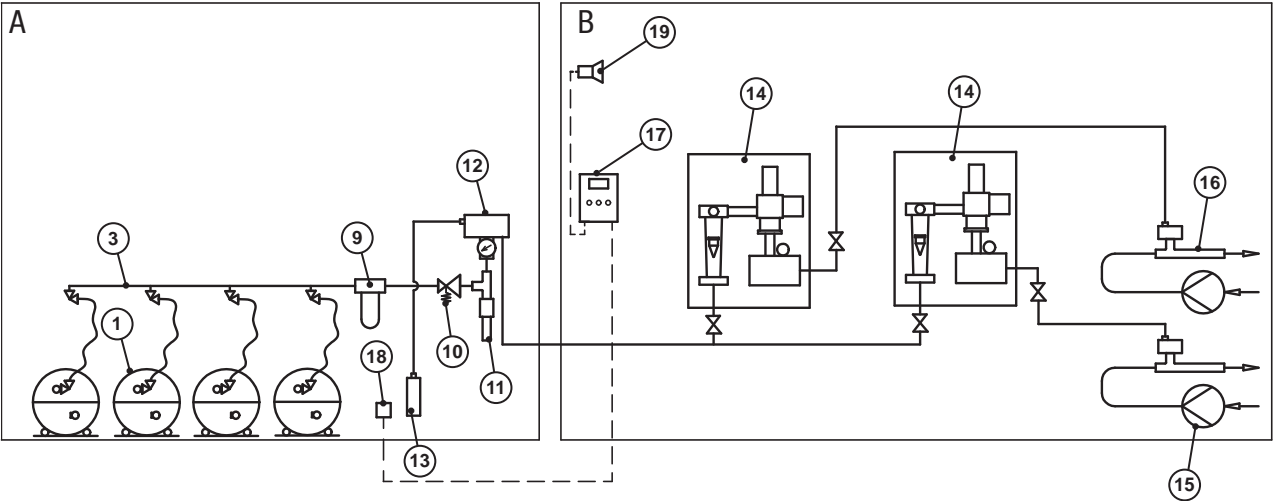


Fig. 15: Installation without a chlorine evaporator

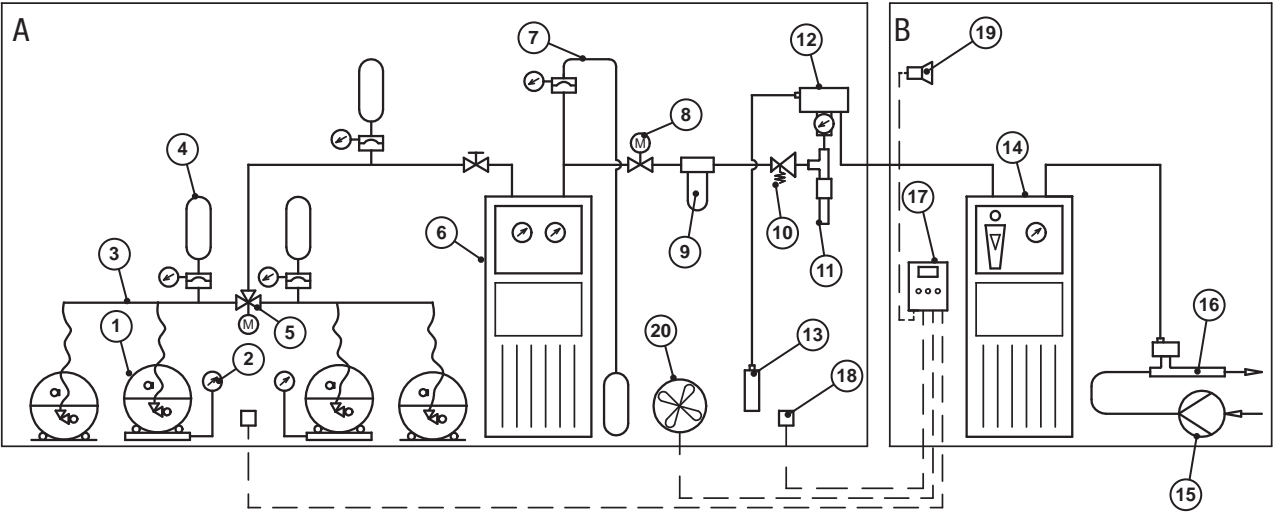


Fig. 16: Installation with a chlorine evaporator

No.	Meaning
A	Room for the chlorine supply
B	Dosing device room
1	Chlorine barrel
2	Chlorine barrel scale
3	Pressurized manifold
4	Expansion system for piping
5	Changeover switch
6	Chlorine evaporator
7	Expansion system for chlorine evaporator
8	Automatic shut-off valve
9	Chlorine gas filter
10	Pressure reducing valve
11	Moisture eliminator with heating collar
12	Vacuum regulator
13	Activated carbon cartridge
14	Dosing device
15	Motive water pump
16	Injector with non-return valve
17	Gas warning device
18	Gas sensor
19	Horn
20	Entrance port of the chlorine eliminator

Tab. 15: Installation schematic key

8 Control

8.1 Controls

8.1.1 Operator controls of the control unit

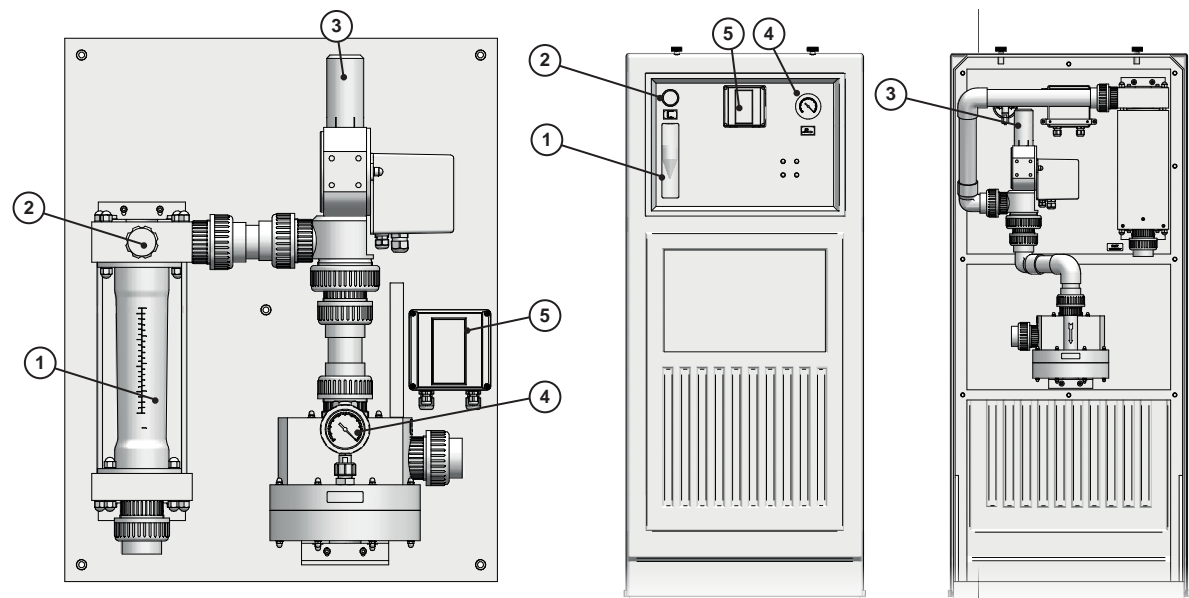


Fig. 17: Controls

Position	Description
1	Flow display
2	Manual dosing valve
3	Hand activation on the electrical regulation valve (optional)
4	Vacuum display
5	Signal converter (optional) See separate document for operation

Tab. 16: Controls

8.2 Manual operation

The electrical regulation valve must be completely opened for manual operation. To this end, the valve spindle is locked in the upper position.

Perform the following working steps:

1. Remove the upper protective cover (1) on the electrical control valve.
2. Grasp the ball knob (2) and pull the valve spindle upwards against the spring force.
3. Swing the locking washer (3) into the groove.
4. Release the ball knob.

✓ **The electrical valve is locked in the OPEN position.**

The dosing quantity is now set on the manual dosing valve.

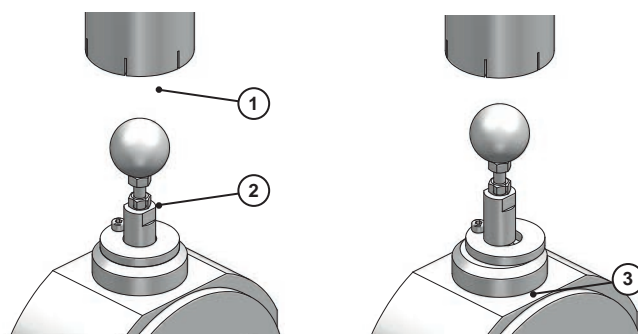


Fig. 18: Switching the control valve

8.3 Automatic operation

The manual dosing valve must be completely opened for automatic operation. To do so, the manual dosing valve is opened approx. 5 revolutions.

The electrical control valve must be completely opened for automatic operation.

Perform the following working steps:

1. Remove the upper protective cover (1) on the electrical control valve.
2. Grasp the ball knob (2) and pull the valve spindle upwards against the spring force.
3. Swing the locking washer (3) out of the groove into the central position.
4. Let the valve spindle be pulled downwards by the spring force and release the ball knob.

✓ **Electrical devices switched to automatic operation.**

The dosing quantity now follows the electrical control signal automatically.

9 Commissioning

9.1 Checking the vacuum system



PLEASE NOTE

Operating faults through leakages in the vacuum system

Small leaks in the vacuum system will not be recognised in normal operation, since no chlorine escapes. Air will enter the system with moisture. The moisture can combine with the chlorine to create deposits and operating malfunctions.

With the injector switched off, there may be a slight chlorine smell.

- ⇒ Check the vacuum system.
- ⇒ Ensure that all action is taken only by personnel with sufficient and corresponding qualifications.



PLEASE NOTE

Damage of the gauge

The search for leaks in the vacuum system often uses compressed air or nitrogen with a slight positive pressure as the leak point can then be recognised using a soapy solution. This test damages the contact gauge.

- ⇒ Dismantle the contact gauge before checking the vacuum system with positive pressure.

The leak-tightness of the vacuum system is inspected together with the vacuum regulator.

Precondition for action:

- ✓ The vacuum system is fully assembled.
- ✓ All the open connections of the vacuum system were closed.
- ✓ The injector is ready for operation.

Perform the following working steps:

1. Interrupt the chlorine supply. To do so, either connect the tank valve of a valve in the supply line to the vacuum regulator.
2. Open the manual dosing valve on the dosing device.
3. Lock the valve spindle of the electrical control valve in the open position.
4. Switch on the injector and wait until the vacuum pressure gauge displays at least -0.5 bar.
5. Switch off the injector.
 - ▶ The vacuum must stay unchanged for at least five minutes.
6. If the vacuum collapses quickly, eliminate the leak and repeat the check on the vacuum system.

- ✓ **Vacuum system checked**

9.2 Turning on the device

Precondition for action:

- ✓ The device is fully assembled.
- ✓ The leak test was performed.

Perform the following working steps:

1. Switch the electrical regulation valve to manual operation (see section 8.2).
 2. Switch the injector on.
 3. Open the chlorine supply.
 4. Set the dosing quantity on the manual dosing valve. Observe the application process to prevent overdosing. Adapt the dosing quantity is necessary.
- ➔ With automatically controlled systems, now adjust the measurement amplifier and controller. Then switch the electrical regulation valve to automatic operation (see section 8.3)
- ✓ **Device switched on.**

9.3 Adapting the power output

If the dosing capacity of the device is considerably higher than required, the maximum dosing capacity can be reduced for automatic operation. Depending on the optional fitting of the dosing device, this reduction can be performed on the signal converter or the electrical regulation valve. See the separate instructions for this device.

The maximum dosing capacity in manual operation is not altered by the settings.



PLEASE NOTE

Poor control results from the PID controller

Many operating companies restrict the output of their automatic dosing device on the manual dosing valve. This is easy, but interferes with the functioning of the PID controller for the application process.

- ⇒ Use the functions of the electrical valve or the signal converter to adapt the power.

10 Operation

10.1 Setting the dosing quantity

The dosing quantity is set automatically for devices with an electrical control valve; a manual setting is not necessary.

The dosing quantity can be set manually on all devices.

Precondition for action:

- ✓ The injector is switched on.
- ✓ The chlorine supply is switched on.

Perform the following working steps:

1. If an electrical regulation valve is fitted, switch to manual operation (see section 8.3)
2. Adjust the manual dosing valve (see fig. 17, position 2) until the flow meter displays the desired dosing quantity.
 - Turning in a clockwise direction: Reduces the dosing quantity
 - Turning counterclockwise: Increases the dosing quantity.

- ✓ **Dosing quantity is set.**



The dosing valve can be closed until the flow meter no longer displays any flow. It is not a shutoff valve however.

10.3 Test intervals

The tasks described here are to be performed by the operating company. Further work on the device is described in the section "maintenance" and can only be performed by qualified personnel.

10.3.1 Daily checks

The components of the chlorination installation must be subject to a daily visual check. Inform service personnel of anything conspicuous or a chlorine smell.

Check the following on the dosing device:

- The flow meter display
- Th vacuum meter display

10.2 Shutting down in an emergency



DANGER

Danger to life from chlorine poisoning!

Chlorine is poisonous. In severe cases, breathing in chlorine may lead to death. It irritates the eyes, the respiratory system and the skin.

- ⇒ If chlorine escapes, leave the room immediately.
- ⇒ Use sufficient personal protective equipment.
- ⇒ If chlorine gas escapes, wear a Type 2 self-contained breathing apparatus that complies with EN 137.
- ⇒ Only initiate counter measures after putting on the protective equipment.

The measures depend on the type of accident and should be planned and executed by professional personnel.

11 Shutdown

11.1 Short-term shutdown

Perform the following working steps:

1. Close the chlorine tank valves.
2. Use the injector to suck off the remaining chlorine.
3. If present, connect the service valve between the dosing device and the injector.
4. Switch off the injector.

✓ **Chlorinator shut down for the short term.**

11.2 Long-term shutdown

Perform the following working steps:

1. Close the chlorine tank valves.
2. Use the injector to suck off the remaining chlorine.
3. Run the chlorinator for approximately five minutes with nitrogen or dry compressed air.
4. If present, connect the service valve between the dosing device and the injector.
5. Switch off the injector.
6. Close all the open connections to protect the lines and devices from humidity and dirt.

✓ **Chlorinator shut down for the long term.**

The device remains in the installation location during the operating pause. All connections remain closed. The voltage supply should remain active so that condensate is unable to gather in the electrical devices.

Ensure ideal storage conditions where possible:

- The storage place must be cold, dry, dust-free and moderately ventilated.
- temperatures between +2 °C and +40 °C.
- relative air humidity must not exceed 90 %



We recommend a minimum of a minor maintenance after a longer standstill period (see "maintenance intervals" on page 27).

11.3 Disposal of old equipment


- Before disposing of the old equipment, you must clean off the remaining chlorine by rinsing it with nitrogen or air.
- The device must be disposed of in accordance with applicable local laws and regulations. It should not be disposed of as domestic waste!

As the disposal regulations may differ from country to country, please consult your supplier if necessary.

In Germany, the manufacturer must provide free-of-charge disposal provided the device has been safely returned along with a declaration of no objection (see page 47).

12 Maintenance

Products by Lutz-Jesco are manufactured to the highest quality standards and have a long service life. However, some parts are subject to operational wear. This means that regular visual inspections are necessary to ensure a long operating life. Regular maintenance will protect the device from operation interruptions.




DANGER

Mortal danger from electric shock!

Live parts can inflict fatal injuries.

- ⇒ Before carrying out any maintenance work, always disconnect the device from the power supply.
- ⇒ Secure the system to prevent it from being switched on by accident.




DANGER

Danger to life from chlorine poisoning!

Do not carry out maintenance or any other work on the chlorinator until the system has been decommissioned and all of the chlorine gas has been removed from the lines. The failure to follow this instruction presents a significant risk of injury.

- ⇒ Prior to any maintenance work, prepare the system in accordance with section 12.3 „Preparing the system for maintenance“ on page 27.




WARNING

Increased risk of accidents due to insufficient qualification of personnel!

Chlorinators and their accessories must only be installed, operated and maintained by personnel with sufficient qualifications. Insufficient qualification will increase the risk of accidents.

- ⇒ Ensure that all action is taken only by personnel with sufficient and corresponding qualifications.



PLEASE NOTE

Damage to the system due to corrosion

Water in chlorine carrying system components combines with chlorine to form hydrochloric acid and leads to corrosion

- ⇒ After maintenance work is complete, remove all water residues from the system before placing it into operation.
- ⇒ When not working with the device, the connections should be sealed air-tight to prevent moisture-penetration.
- ⇒ Keep the connection of the contact vacuum meter closed so that humidity cannot penetrate

12.1 Maintenance intervals

To avoid hazardous incidents, chlorinators must be regularly maintained. This table gives you an overview of maintenance work and the intervals at which you must carry it out. The next few sections provide instructions for carrying out this work.

Interval	Maintenance
After 1 year	Minor maintenance: <ul style="list-style-type: none"> ■ Cleaning the device ■ Replacing the connection seals ■ Renew the seals on the manual dosing valve ■ Functional control ■ Check the settings
After 3 years	Major maintenance: <ul style="list-style-type: none"> ■ Cleaning the device ■ Replace all seals ■ Renew the diaphragm ■ Replace the spring. ■ Functional control ■ Check the settings
After 5 years	<ul style="list-style-type: none"> ■ Replace the vacuum meter

Tab. 17: Maintenance intervals



In some cases, regional regulations may require shorter maintenance intervals. Maintenance intervals depend only on how frequently the equipment is used. Chemical wear of rubber parts, for example, begins with the initial medium contact and continues irrespective of the usage.

12.2 Maintenance accessories

- Silicone grease, medium viscosity, 35 g for rubbing into the seals
- Open-end spanner AF 32
- Key for fitting the diaphragm (Qty 2 required)
- Plastic tool for dismantling O-rings

12.3 Preparing the system for maintenance

Perform the following working steps:

1. Close the chlorine tank valves.
 2. Use the injector to suck off the remaining chlorine.
 3. Run the chlorinator for approximately five minutes with nitrogen or dry compressed air.
 4. Switch off the injector.
- ✓ **The system is prepared for maintenance.**

12.4 Minor maintenance

Precondition for action:

- ✓ The system has been prepared for maintenance (see chapter 12.3).
- ✓ The fitting maintenance set is available.

12.4.1 Cleaning the device

The device is only cleaned from outside. Interior cleaning is only required in the following cases:

- Heavy soiling in the flow meter
- Malfunctions

12.4.2 Replacing the connection seals

The seals in all pipe unions are replaced.

Perform the following working steps:

1. Loosen the union nuts and remove the O-rings with a blunt tool.
2. Clean the sealing surfaces with a soft cloth.
3. Look into the interior of the connection. Should a lot of soiling be visible, the device requires cleaning from inside (see the description from section 12.5).
4. Fit the new O-rings and the connections. The union nuts are tightened by hand.

✓ **Connection seals renewed.**

12.4.3 Renewing the seals on the dosing valve

Resources required:

- ✂ Cotton swabs
- ✂ Cleaning alcohol

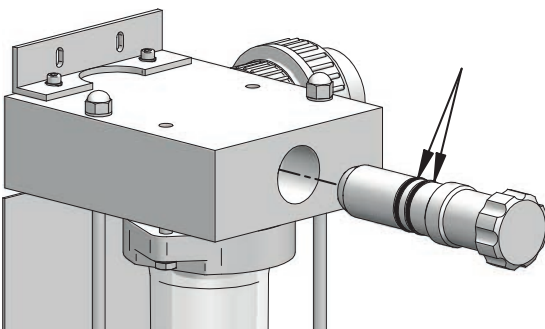


Fig. 19: Seals on the dosing valve

Perform the following working steps:

1. Unscrew and remove the valve spindle on the flow meter.
2. - Remove the O-rings with a blunt tool.
3. Clean the O-ring grooves with a damp cloth and if necessary, with a little alcohol.
4. Clean the drillhole in the head of the flow meter with a cotton bud soaked in alcohol.

5. Mount the new O-rings on the valve spindle. Rub the O-rings with a little silicone grease.

6. Insert the valve spindle and screw it in until you feel real resistance.

7. Unscrew in the valve spindle by 5 revolutions.

✓ **Seal is renewed.**

12.4.4 Finishing the minor maintenance

The following work is performed to conclude the minor maintenance:

- Functional check in accordance with chapter 12.9
- If necessary, set the back-pressure regulator in accordance with chapter 12.9

12.5 Maintenance on the flow meter

The flow meter is cleaned and all elastomers are replaced.

Precondition for action:

- ✓ The system has been prepared for maintenance (see 12.3).
- ✓ The fitting maintenance set is available.

Resources required:

- ✂ Cotton swabs
- ✂ Cleaning alcohol

12.5.1 Dismantling the flow meter

Perform the following working steps:

1. Dismantle the complete flow meter including the mounting angle from the dosing device. Place the device on a flat surface.
2. Remove the tension rods.
3. Loosen the screws on the stops. Pull out the glass tube with a light revolution.
4. Completely dismantle the stops.
5. Unscrew and remove the valve spindle on the flow meter.
6. Remove the O-ring with a blunt tool.

✓ **Flow meter dismantled.**

12.5.2 Cleaning the flow meter:

Perform the following working steps:

1. Clean all parts thoroughly with a soft cloth. Warm water or alcohol is suitable for this purpose.
2. Clean the glass tube with e.g. warm water and a flat brush.
3. Perform a visual check on all parts. Pay especial attention to the drill-hole for the manual dosing valve and the sealing surfaces for the flat gaskets. Replace the damaged parts.

✓ **Flow meter cleaned.**

12.5.3 Mounting the flow meter

The diagram in section 14 shows the arrangement of the parts.

Precondition for action:

- ✓ All parts have been dried well after cleaning.
- ✓ All parts are in a good condition.

Perform the following working steps:

1. Start with the inlet block (lower PVC block).
 2. Insert the flat gasket in the recess in the PVC part. Place on the lower stop and insert the screws with a little fitting grease. Tighten the screws lightly by hand.
 3. Repeat this work step on the outlet block (upper PVC block).
 4. Fit the O-ring on the upper stop.
 5. Place both PVC blocks upright on a flat surface.
 6. Position the float and both stops in the measuring tube. Ensure that the upper and lower stop are not switched.
 7. Slide in the glass tube to the fullest extent Turn the glass tube little whilst doing so.
 8. Fit the tension rods with nuts but do not yet tighten the nuts.
 9. Tighten the screws on the stops with approx. 1 Nm.
 - ▶ The glass tube cannot turn any further.
 10. Tighten the nuts with approx. 1 Nm.
 11. Mount the new O-ring on the valve spindle. Rub the O-ring with a little silicone grease.
 12. Insert the valve spindle and screw it in until you feel real resistance.
 13. Unscrew in the valve spindle by 5 revolutions.
- ✓ **Flow meter mounted.**

12.6 Maintenance on the electrical regulation valve

The electrical regulation valve is optional. Perform the maintenance in accordance with the regulation valve instructions.

12.7 Maintenance of the back-pressure regulator

The back-pressure regulator is cleaned and all elastomers are replaced.

Precondition for action:

- ✓ The system has been prepared for maintenance (see 12.3).
- ✓ The fitting maintenance set is available.

Resources required:

- ✂ Cleaning alcohol
- ✂ 2 wrenches for mounting the diaphragm
- ✂ Open-end spanner AF 32

12.7.1 Dismantling the back-pressure regulator

Perform the following working steps:

1. Dismantle the complete back-pressure regulator including the mounting angle from the dosing device. Place the device on a flat surface.
 2. With cabinets, the vacuum meter remains in the device. With wall devices, dismantle the pressure gauge. Seal the entry of the pressure gauge to prevent the penetration of air moisture. See section 12.8 for further information regarding the vacuum meter.
 3. Mark the direction of installation of all housing sections and the mounting angle with a waterproof marker.
 4. Remove the air filter.
 5. Unscrew the adjusting screw completely. Remove the spring and spring plate.
 6. Remove the cap nuts on the outlet block.
 7. Lift up the outlet block.
 8. Remove the parts for the ambient air valve from the outlet block.
 9. Unscrew the pressure gauge connection from the upper housing section.
 10. Remove the rest of the housing screws.
 11. Open the membrane chamber housing and remove the diaphragm disc.
 12. Loosen the clamping ring on the diaphragm. Use the key for mounting the diaphragm.
 13. Unscrew the locating cone from the diaphragm disc.
 14. Loosen the counternut on the valve seat and unscrew the valve seat from the upper section.
- ✓ **Back-pressure regulator dismantled.**

12.7.2 Cleaning the back-pressure regulator

Perform the following working steps:

1. Clean all parts thoroughly with a soft cloth. Warm water or alcohol is suitable for this purpose.
 2. Allow all components to dry well.
 3. Perform a visual check on all parts. Pay especial attention to the tensioning surfaces for the diaphragm and the conical surfaces on the locating cone and valve seat. Replace the damaged parts.
- ✓ **Back-pressure regulator cleaned**

12.7.3 Fitting the back-pressure regulator

The diagram in section 14 shows the arrangement of the parts.

Precondition for action:

- ✓ All parts have been dried well after cleaning.
- ✓ All parts are in a good condition.

Mounting the diaphragm disc

Perform the following working steps:

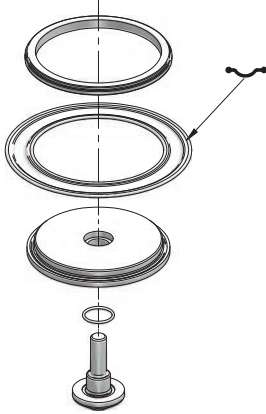


Fig. 20: Mounting the diaphragm disc

1. Insert the diaphragm disc on a level surface in the direction shown. Moisten the thread lightly with silicone grease.
2. Rub the inner edge of the diaphragm with silicone grease lightly.
3. Place the diaphragm on the diaphragm disc with the dome pointing downwards and place on the clamping ring.
 - ▶ The uneven side of the clamping ring point towards the diaphragm.
4. Tighten the clamping ring by hand. Then tighten by max. 1/2 revolution using the tool.
5. Insert the O-ring in the groove on the locating cone and screw the locating cone into the diaphragm disc from below.
6. Turn the diaphragm disc and check the correct alignment of the parts using the exploded diagram in section 14.

✓ **Diaphragm disc mounted**

Mounting the membrane chamber

1. Rub the outer wheel with silicone grease lightly.
2. Place the diaphragm disc in the lower housing section. The cylindrical tap of the locating cone fit in the drillhole in the lower housing section. Ensure the correct position of the diaphragm.
3. Place on the upper housing section. Turn both housing sections against each other with slight pressure.
 - ▶ The diaphragm slides into the correct position.
4. Insert the 8 tension rods. The two longer tension rods both hold the mounting angle. The position of the mounting angle depends on the form of the device. Cabinet or wall device. Observe the markings made during dismantling.
5. Mount the washers and cap nuts. Tighten the nuts crosswise with approx. 1 Nm.

✓ **Membrane chamber is mounted.**

Mounting the valve seat

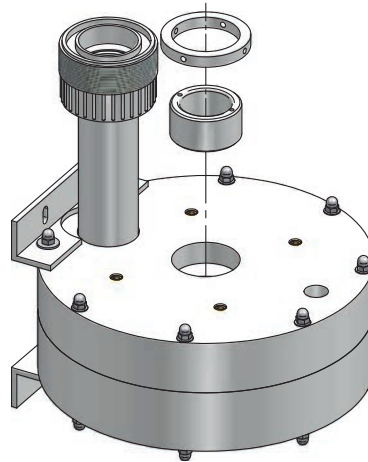


Fig. 21: Mounting the valve seat

Perform the following working steps:

1. Mount the valve seat in the upper housing section. The two drillholes point upwards. Screw in the valve seat by hand until it touches the white locating cone of the diaphragm disc.
 - ▶ The valve seat is almost level with the upper housing section.
2. Mark the position of the valve seat with a waterproof marker. Screw out the valve seat 7.5 mm. That amounts to 3.75 revolutions.
3. Secure the base frame with the counternut. Use e.g. two Ø 3.5 mm metal pins to tighten.

✓ **Valve seat mounted**

Fitting the outlet block

Perform the following working steps:

1. Mount the O-ring in the groove underneath the outlet block. Rub the O-ring with silicone grease lightly.
2. Mount the outlet block on the upper housing section.
3. Set the threaded rods in the 4 drillholes. Screw them in until they protrude by 6mm.
4. Mount the washers and cap nuts. Tighten the nuts crosswise with approx. 1 Nm.

✓ **Outlet block fitted.**

Mounting the control spring

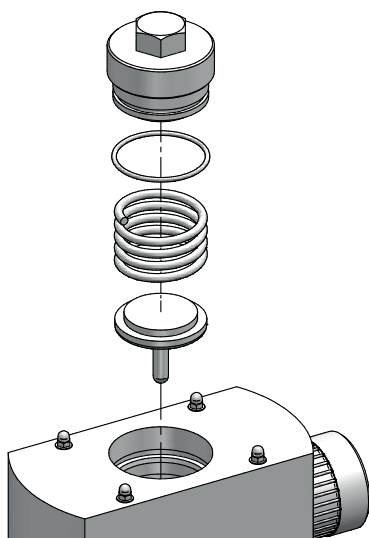


Fig. 22: Mounting the control spring

1. Mount the spring plate and the spring. Ensure that the spring plate is straight. It centres itself in the recess in the diaphragm disc.
2. Mount the O-ring on the adjusting screw. Rub the O-ring with silicone grease lightly.
3. Press the adjusting screw against the outlet block. It is screwed in by approx. 7 revolutions. Use an open-end spanner (AF 32) for this purpose.
4. Then the adjusting screw protrudes by approx. 8 mm.

✓ **Control spring is mounted**

Mounting the back-pressure regulator in the device

1. Mount the connecting parts for the vacuum meter with new O-rings. With the cabinet, the hose connection is screwed in with PTFE strips. The vacuum meter is cleaned in accordance with section 12.8 and then mounted.
2. Mount the back-pressure regulator in the dosing device. The screws are tightened with approx. 1 Nm.
3. Reconnect the pipes. Use the new O-rings in the screw connections.

✓ **Back-pressure regulator fitted.**

12.8 Cleaning the vacuum meter



PLEASE NOTE

Damage to pressure gauges

Pressure gauges are measurement devices which are adjusted by specialists when manufactured. Pressure gauges that have been disassembled must be tested and readjusted by the manufacturer.

- ⇒ Do not dismantle pressure gauges.
- ⇒ pressure gauges are highly complicated which cannot be emptied entirely.
- ⇒ Do not allow any soiling to enter the pressure gauge.
- ⇒ Do not allow any water to enter the pressure gauge.

The maintenance on the vacuum meter restricts itself to a visual check and the cleaning of the connection.

Precondition for action:

- ✓ The system has been prepared for maintenance (see chapter 12.3).

Resources required:

- ✗ PTFE strip
- ✗ Cotton swabs
- ✗ Cleaning alcohol

Perform the following working steps:

1. If the device is fitted with electrical contacts, branch off the cable. Note the cable assignments.
2. Dismantle the vacuum meter from the dosing device
3. Remove the PTFE strip from the thread.
4. Check the input of the vacuum meter for soiling. Remove the soiling with cleaning alcohol. At the same time, hold the device with the connection facing downwards so that soiling cannot fall into the device. Do not use a pointed tool, so that the protective film on the plate spring is not destroyed.
5. If the pressure gauge is not immediately reconnected, seal the connection airtight.
6. Fit the vacuum meter with approx. 5 long PTFE strips.
7. With a cabinet, fit a new hose between the vacuum meter and the back-pressure regulator.
8. If necessary, reconnect the cable.

✓ **Vacuum meter cleaned.**

12.9 Adjusting the backpressure regulator

Precondition for action:

- ✓ The injector is switched on.
- ✓ The chlorine supply is switched on.

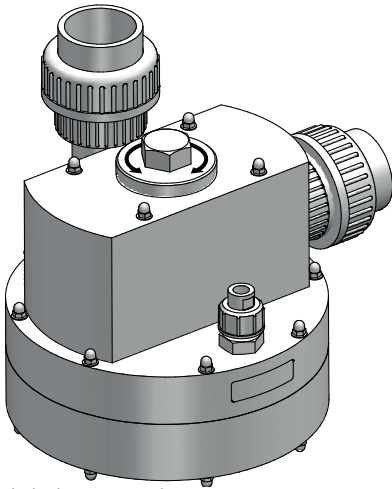


Fig. 23: Adjusting the backpressure regulator

Perform the following working steps:

1. Open the chlorine supply.
2. Set the dosing to approx. 30 %.
3. Check the vacuum meter display. It should display approx. -0.25 bar. If necessary, adjust the adjusting screw of the back-pressure regulator.
 - Turning in a clockwise direction: The vacuum becomes stronger.
 - Turning counterclockwise: The vacuum becomes weaker

✓ **Back-pressure regulator set**



An insufficient vacuum means that the dosing device will not provide the full dosing capacity. In the majority of cases, if the vacuum cannot be set to -0.25 bar via the back-pressure regulator then the injector vacuum is not strong enough. Check the technical data of the injector.

12.10 Finishing maintenance

Perform the following working steps:

1. Make a note of the date and scope of the maintenance performed.
2. Attach a sticker displaying the maintenance date to the device.
3. Tighten all the cable screw connections.
4. To restart the system, proceed in accordance with the instructions in section 9 "Start-up".

✓ **Maintenance completed.**

13 Troubleshooting

All possible errors are listed in this table.

Problem	Possible cause	Remedy
Dosing capacity too low	Insufficient chlorine supply	Connect sufficient chlorine drums
	Chlorine gas filter blocked	Clean or exchange the filter element
	Supply pressure too low	Increase the outlet pressure of the pressure reducing valve
	Insufficient vacuum	See below
	Lines too small	See section 7.3
Dosing quantity cannot be set manually	The electrical regulation valve is incomplete.	Lock the electrical regulation valve in the opened position (Chapter 8.2)
Dosing capacity cannot be set manually	The manual dosing valve has not been opened completely.	Open the manual dosing valve completely (section 8.3)
	The electrical regulation valve is locked in the open position.	Switch the valve to automatic operation (section 8.3)
Insufficient vacuum	Leak in the vacuum system.	Tighten all screw connections in the vacuum line. Check the O-rings.
	Reduced injector performance from...	
	... deposits in the injector	Perform maintenance on the injector
	...Soiling in the motive water filter	Clean the filter
	... back pressure too high	Measure the back pressure and compare with the technical data from the injector
	... excess pressure loss on the injector non-return valve	Perform maintenance on the injector non-return valve
Soiling in the flow meter	Insufficient chlorine quality	See section 3.2
	Slight leak in the vacuum system means penetration of a little moisture, which results in soiling.	Find leaks and redress them.
Water in the device	Leaky injector non-return valve	Perform maintenance on the injector non-return valve

Tab. 18: Troubleshooting

14 Spare parts

14.1 Housing SL

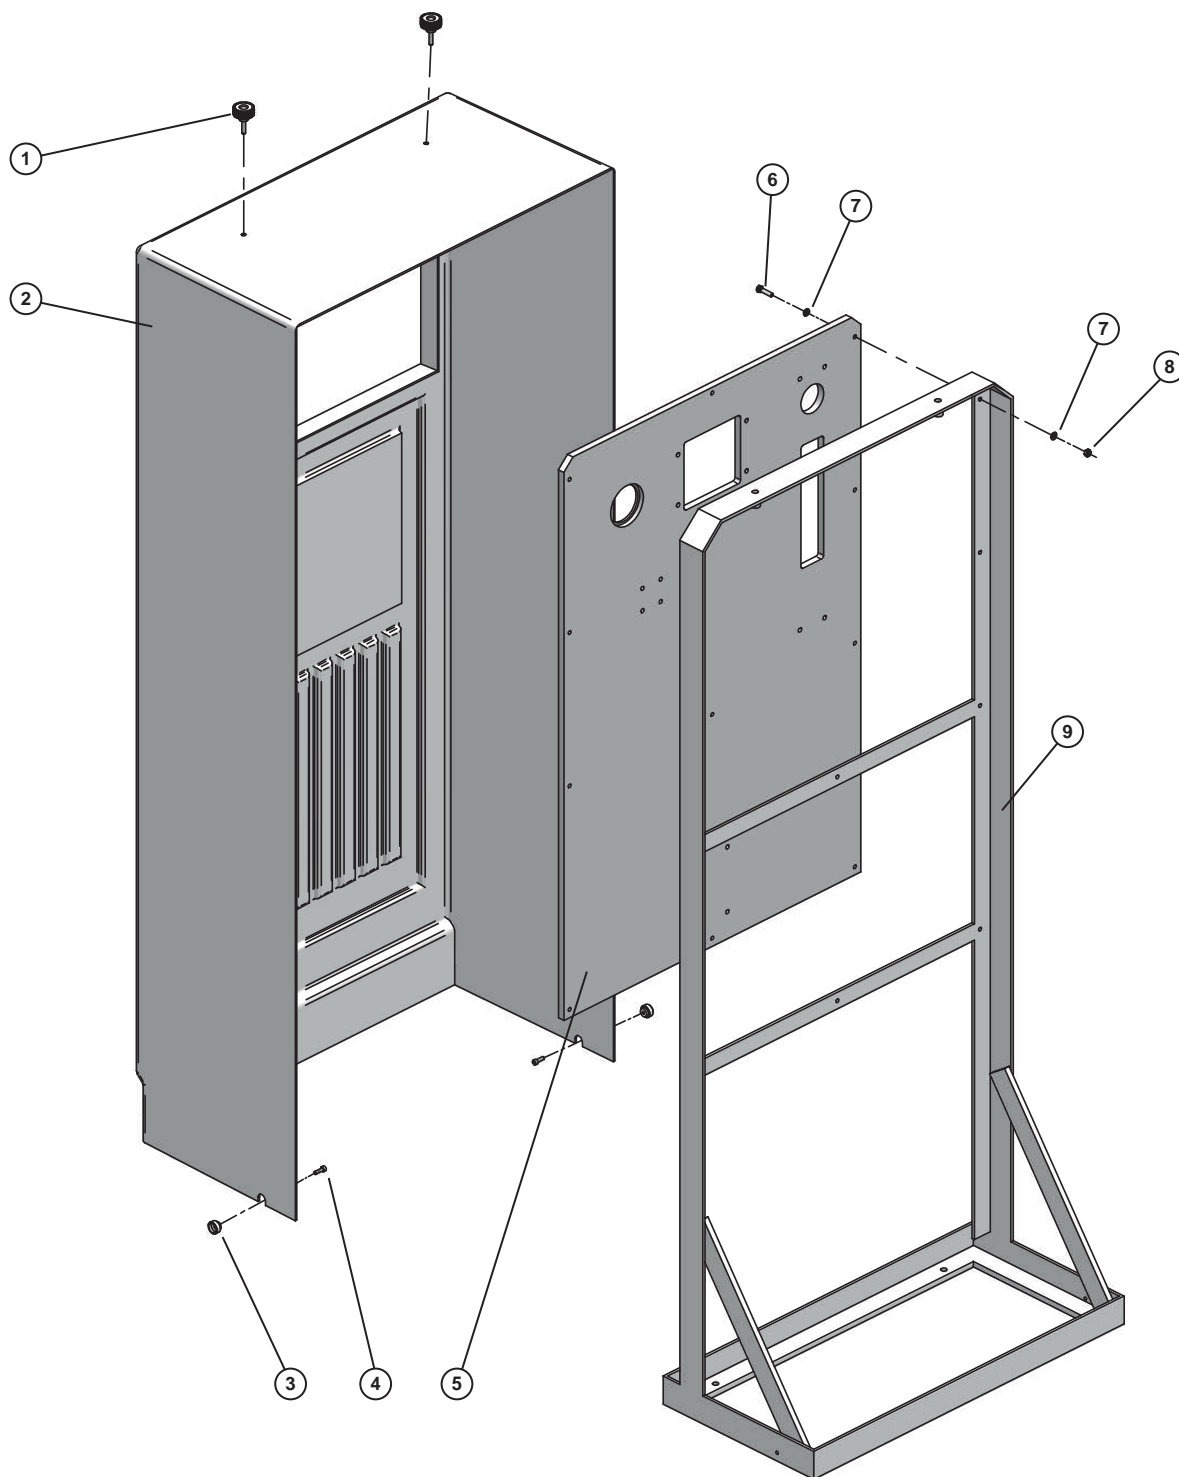


Fig. 24: Housing for C 2701/SL

Position	No.	Description
1	2	Knurled knob M6x25
2	1	Hood cabinet
3	2	Knurled nut M5
4	2	Screw M5x16
5	1	Mounting plate
6	11	Screw M6x25
7	22	Washer Ø6.4
8	11	Hexagon nut M6
9	1	Base frame

Tab. 19: Housing for C 2701/SL

14.2 Module overview SL

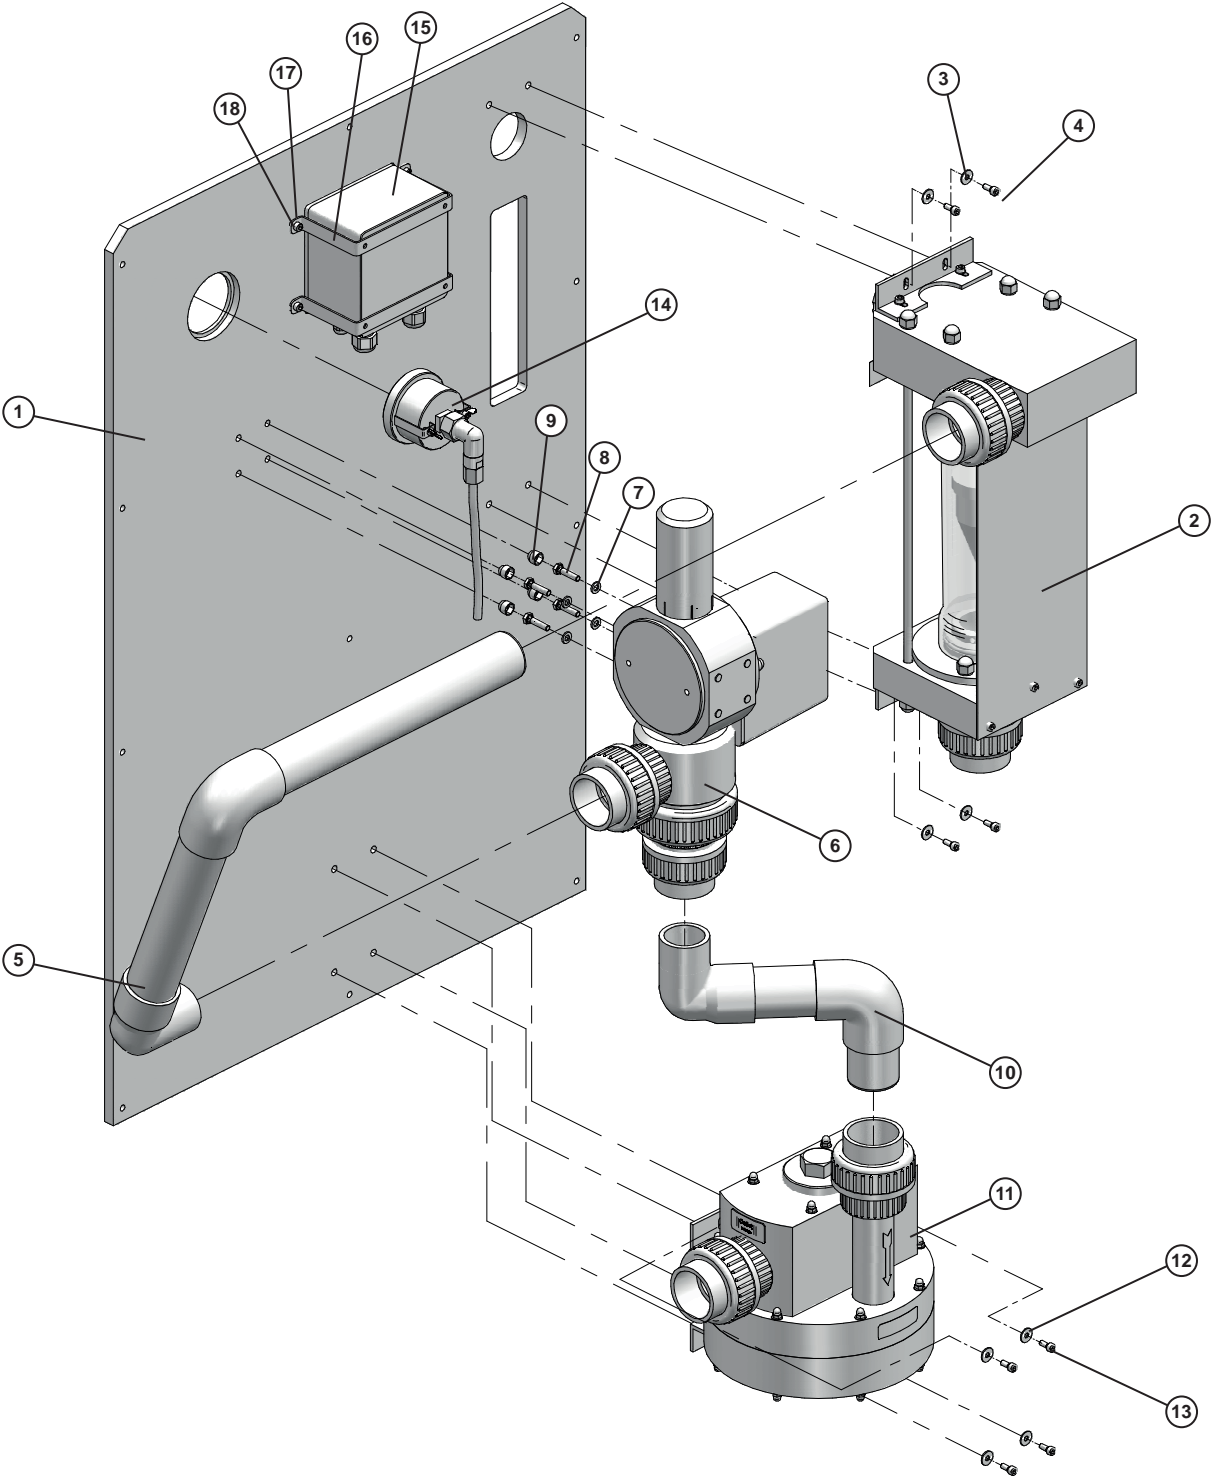


Fig. 25: Modules C 2701 SL

Position	No.	Description
1	1	Mounting plate
2	1	Flow meter
3	4	Washer Ø5.3
4	4	Screw M5x12
5	1	Pipe
6	1	Electrical regulation valve
7	4	Washer Ø6.4
8	4	Screw M6x25
9	4	Protective cap
10	1	Pipe
11	1	Back-pressure regulator
12	4	Washer Ø5.3
13	4	Screw M5x12
14	1	Vacuum meter
15	1	Signal converter
16	2	Mounting yoke
17	4	Washer Ø5.3
18	4	Screw M5x12

Tab. 20: Modules C 2701 SL

14.3 Overview of modules WL

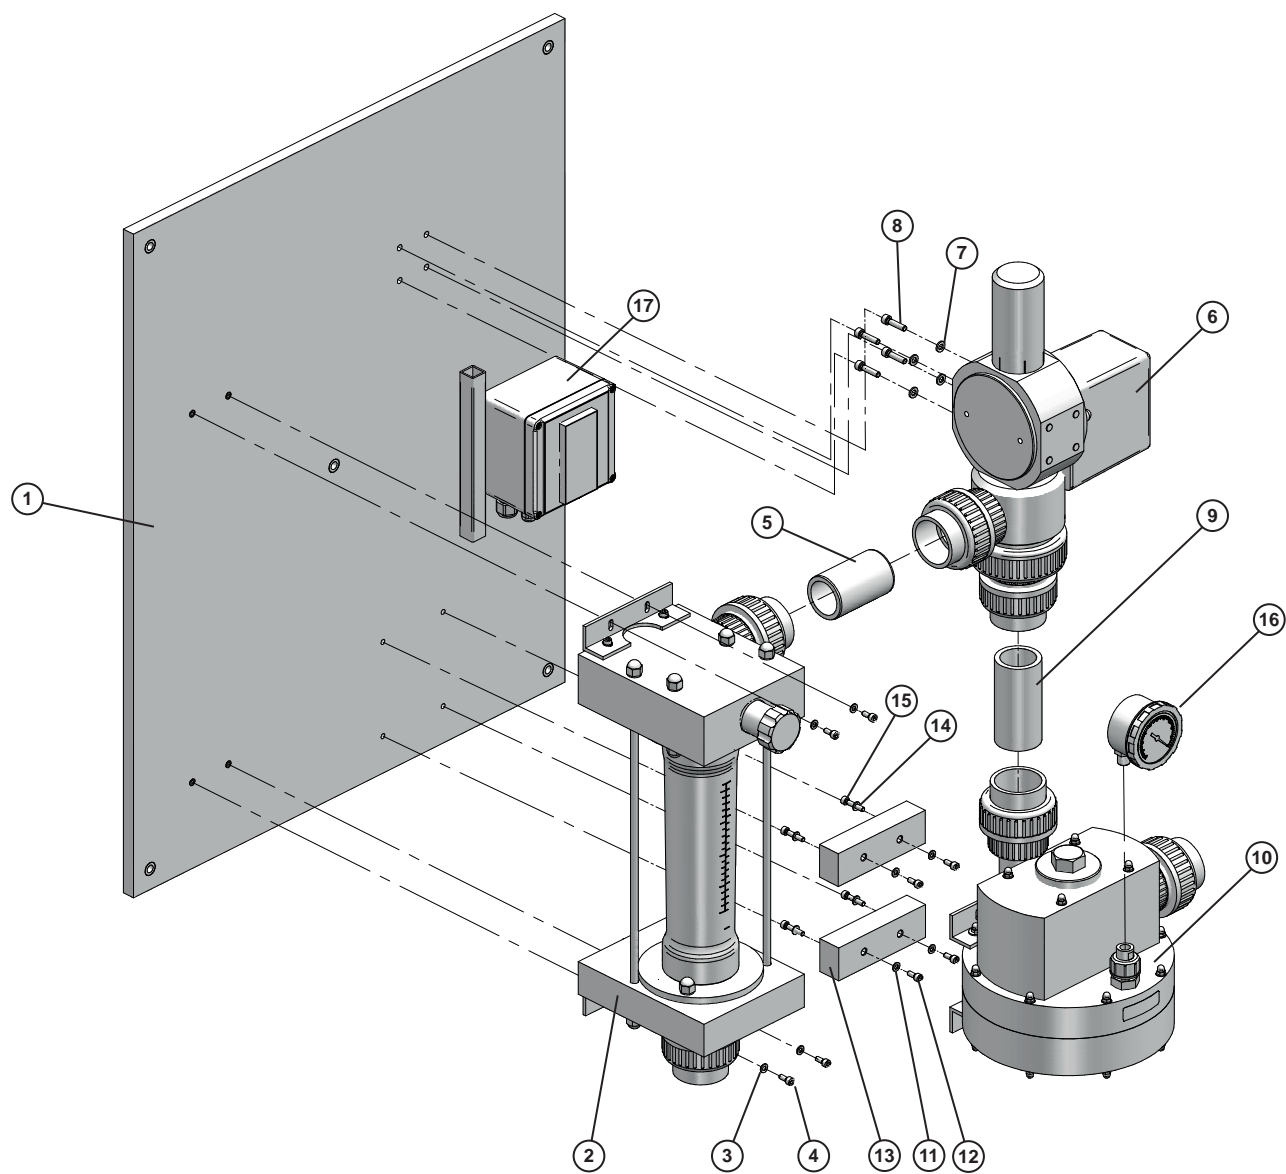


Fig. 26: Modules C 2701 WL

Position	No.	Description
1	1	Mounting plate
2	1	Flow meter
3	4	Washer Ø5.3
4	4	Screw M5x12
5	1	Pipe
6	1	Electrical regulation valve
7	4	Washer Ø6.4
8	4	Screw M6x25
9	1	Pipe
10	1	Back-pressure regulator
11	4	Washer Ø5.3
12	4	Screw M5x12
13	2	Distance block
14	4	Washer Ø5.3
15	4	Screw M5x25
16	1	Vacuum meter
17	1	Signal converter

Tab. 21: Modules C 2701 WL

14.4 Flow meter

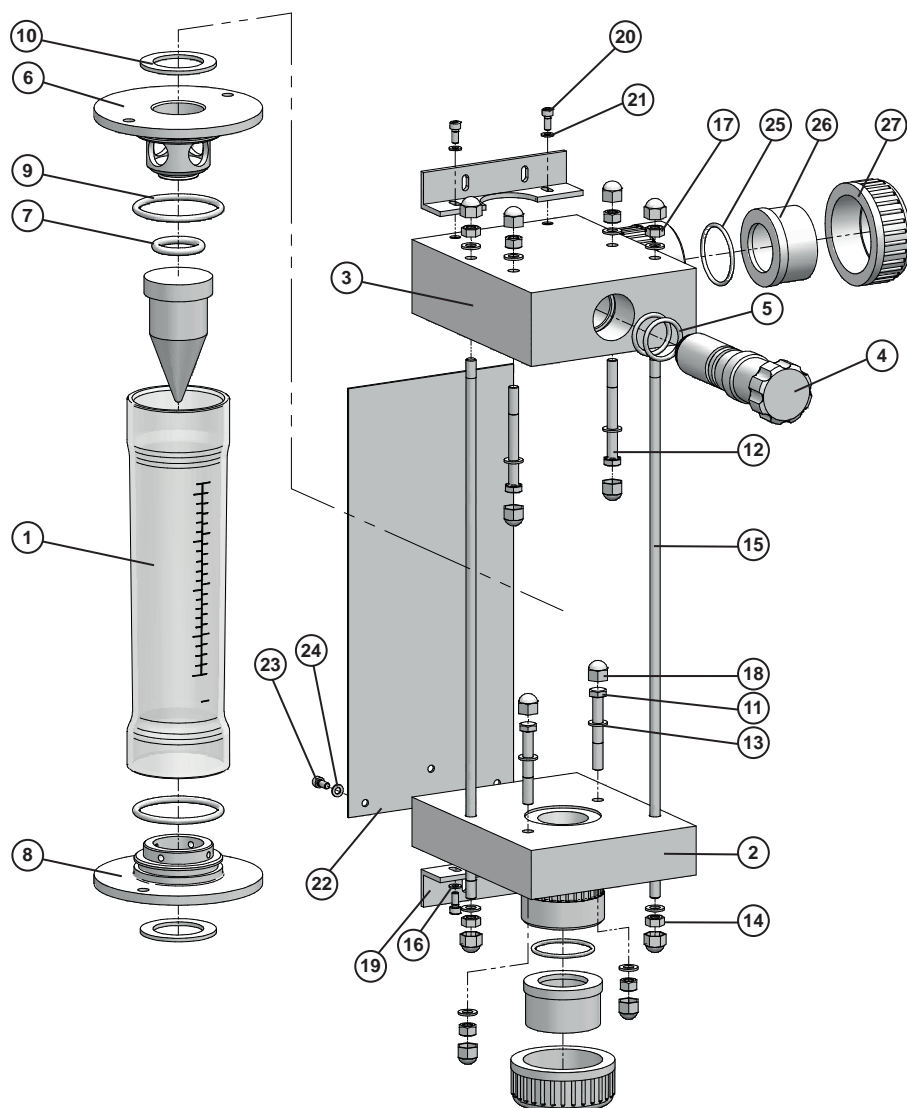


Fig. 27: Flow meter for C 2701

Position	No.	Description
1	1	Glass tube
2	1	Inlet block
3	1	Outlet block
4	1	Valve spindle
5	2	O-ring
6	1	Upper limit
7	1	O-ring
8	1	Lower limit
9	2	O-ring
10	2	Flat gasket
11	2	Hexagon-headed bolt M8x60
12	2	Hexagon-headed bolt M8x80
13	8	Washer Ø8.4
14	4	Hexagon nut M8
15	2	Tension rod
16	4	Washer Ø8.4
17	4	Hexagon nut M8
18	12	Protective cap
19	2	Mounting angle
20	4	Cylinder head screw M5x12
21	4	Washer Ø5.3
22	1	Back panel (only with C 2701 SL)
23	3	Cylinder head screw M5x12
24	3	Washer Ø5.3
25	2	O-ring
26	2	Flange bushing
27	2	Union nut

Tab. 22: Flow meter C 2701

14.5 Back-pressure regulator

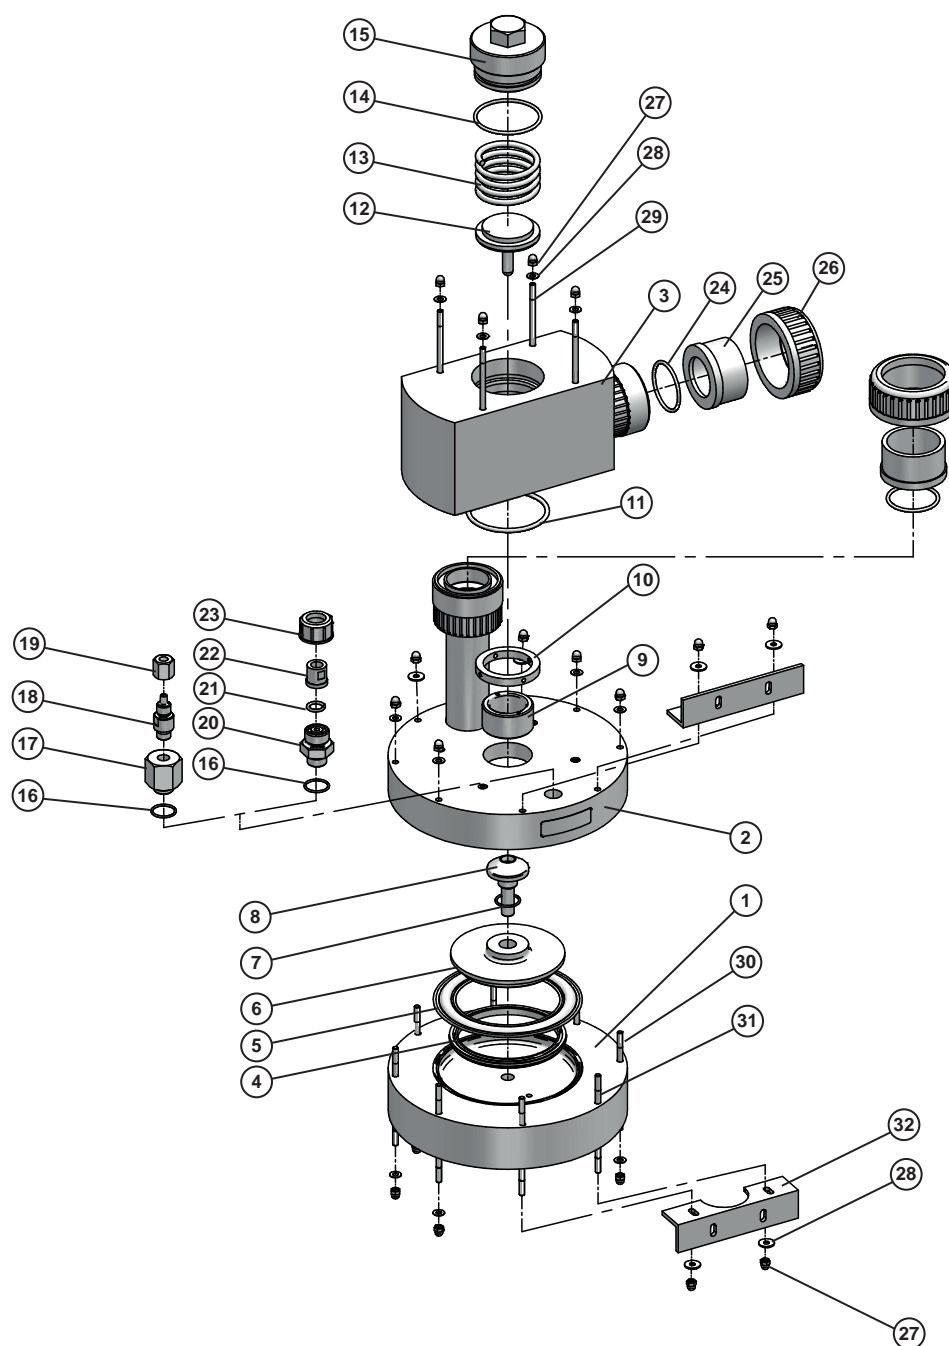


Fig. 28: Back-pressure regulator for C 2701

Position	No.	Description
1	1	Lower housing section
2	1	Upper housing part
3	1	Outlet block
4	1	Hose clamp
5	1	Diaphragms
6	1	Diaphragm disc
7	1	O-ring Ø20x1.78
8	1	Locating cone
9	1	Valve seat
10	1	Counternut M48x2
11	1	O-ring Ø75
12	1	Spring plate Ø60
14	1	O-ring Ø58
15	1	Adjusting screw
16	1	O-ring Ø20

Position	No.	Description	
17	1	Reduction	C 2701 SL
18	1	Hose connection	
19	1	Union nut for hose	
20	1	Double nipple	C 2701 WL
21	1	O-ring Ø12	
22	1	Flange bushing G1/4	
23	1	Cap nut G5/8	
24	2	O-ring Ø40 or Ø47	
25	2	Flange bushing	
26	2	Union nut	
27	20	Cap nut M5	
28	20	Washer Ø5.3	
30	6	Threaded rod 97 mm	
31	2	Threaded rod 105 mm	
32	2	Mounting angle	

Tab. 23: Back-pressure regulator C 2701

14.6 Vacuum meter

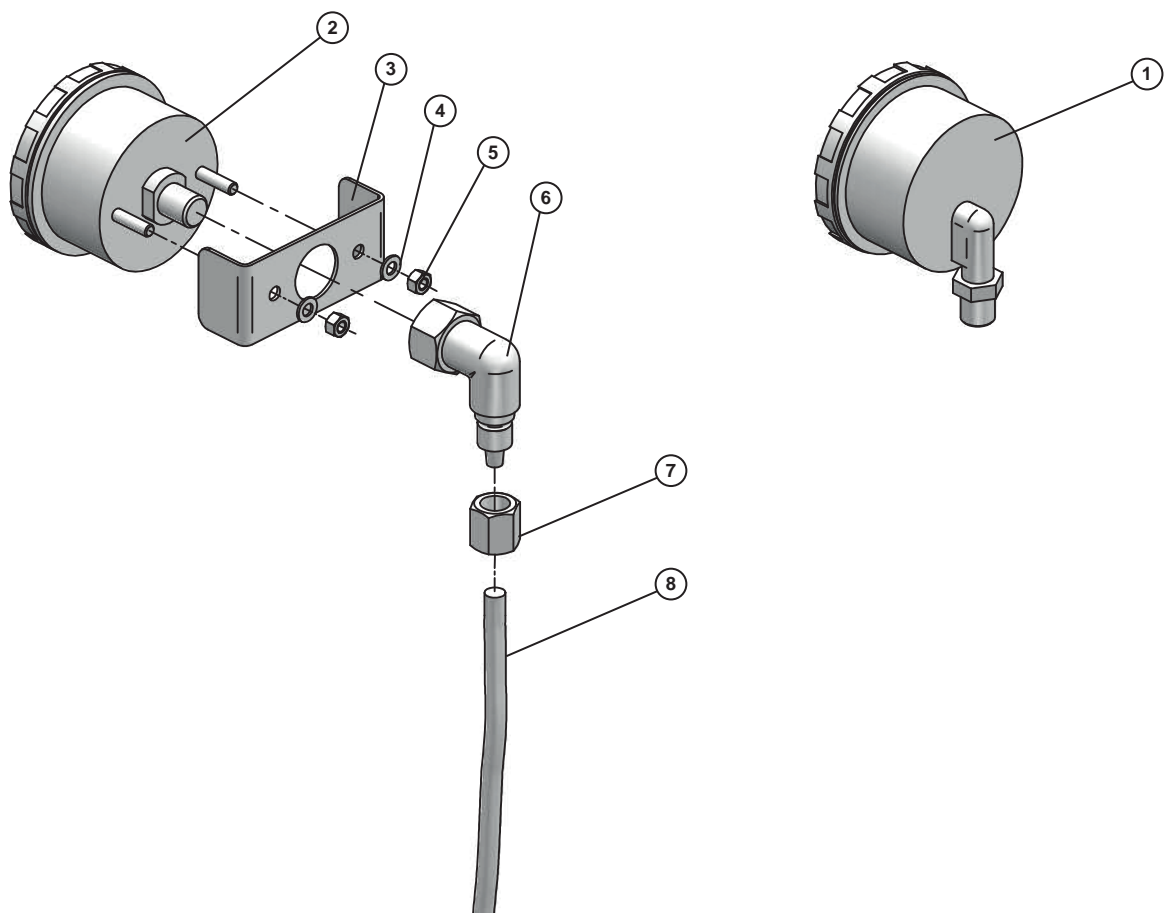


Fig. 29: Vacuum meter

Position	No.	Description	
1	1	Vacuum meter	C 2701 WL
2	1	Vacuum meter	C 2701 SL
3	1	Bracket	
4	2	Washer Ø5.3	
5	2	Hexagon nut M5	
6	1	Angle G1/4 with hose connection	
7	1	Union nut	
8	1	Hose	

Tab. 24: Vacuum meter

14.7 Maintenance sets

Part	Content	Article no.	
		40 – 60 kg/h	120 – 200 kg/h
Small maintenance kit (for annual service)	<ul style="list-style-type: none"> ■ Connection seals ■ Seals for the manual dosing valve 	41400	41401
Large maintenance set (after 3 years)	<ul style="list-style-type: none"> ■ All seals ■ Diaphragms ■ Springs ■ PTFE strip ■ Silicone grease ■ Hose piece 	C 2701 without electrical device regulation valve	
		43235	43236
		C 2701 with electrical device regulation valve	
		43237	43238

Tab. 25: Maintenance kits

15 EU Declaration of Conformity



(DE) EU-Konformitätserklärung

Hiermit erklären wir, dass das nachfolgend bezeichnete Gerät aufgrund seiner Konzipierung und Bauart sowie in der von uns in Verkehr gebrachten Ausführung den einschlägigen grundlegenden Sicherheits- und Gesundheitsanforderungen der aufgeführten EG-Richtlinien entspricht. Bei einer nicht mit uns abgestimmten Änderung am Gerät verliert diese Erklärung ihre Gültigkeit.

(EN) EU Declaration of Conformity

We hereby certify that the device described in the following complies with the relevant fundamental safety and sanitary requirements and the listed EC regulations due to the concept and design of the version sold by us.

If the device is modified without our consent, this declaration loses its validity.

(FR) Déclaration de conformité UE

Nous déclarons sous notre propre responsabilité que le produit ci-dessous mentionné répond aux exigences essentielles de sécurité et de santé des directives CE énumérées aussi bien sur le plan de sa conception et de son type de construction que du modèle que nous avons mis en circulation.

Cette déclaration perdra sa validité en cas d'une modification effectuée sur le produit sans notre accord explicite.

(ES) Declaración de conformidad UE

Por la presente declaramos que, dados la concepción y los aspectos constructivos del modelo puesto por nosotros en circulación, el aparato mencionado a continuación cumple con los requisitos sanitarios y de seguridad vigentes de las directivas de la U.E. citadas a continuación.

Esta declaración será invalidada por cambios en el aparato realizados sin nuestro consentimiento.

(PT) Declaração de conformidade UE

Declaramos pelo presente documento que o equipamento a seguir descrito, devido à sua concepção e ao tipo de construção daí resultante, bem como a versão por nós lançada no mercado, cumpre as exigências básicas aplicáveis de segurança e de saúde das directivas CE indicadas.

A presente declaração perde a sua validade em caso de alteração ao equipamento não autorizada por nós.

Bezeichnung des Gerätes:

Chlorgasdosiergerät

Description of the unit:

Chlorinator

Désignation du matériel:

Appareil de dosage de chlore gazeux

Descripción de la mercancía:

Aparato dosificador de cloro gaseoso

Designação do aparelho:

Aparelho de doseamento de gás de cloro

Typ:

C 2701

Type:

EU-Richtlinien:

2006/42/EC, 2014/35/EU, 2014/30/EU

EU directives:

Die Schutzziele der Niederspannungsrichtlinie 2014/35/EU wurden gemäß Anhang I, Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG eingehalten.

The protective aims of the Low Voltage Directive 2014/35/EU were adhered to in accordance with Annex I, No. 1.5.1 of the Machinery Directive 2006/42/EC.

Harmonisierte Normen:

DIN EN ISO 12100:2011-03,

Harmonized standards:

DIN EN 61000-6-1:2007, EN 61000-6-3:2007 + A1:2011

Dokumentationsbevollmächtigter:

Lutz-Jesco GmbH

Authorized person for documentation:

Heinz Lutz
Geschäftsführer / Chief Executive Officer
Lutz-Jesco GmbH
Wedemark, 21.10.2020

Lutz-Jesco GmbH
Am Bostelberge 19
30900 Wedemark
Germany

16 Declaration of no objection

Please copy the declaration, stick it to the outside of the packaging and return it with the device.

Declaration of no objection

Please fill out a separate form for each appliance!

We forward the following device for repairs:

Device and device type:

Part-no.:

Order No.:

Date of delivery:

Reason for repair:

.....

.....

Dosing medium

Description:

Irritating: ☐ Yes ☐ No

Properties:

Corrosive: ☐ Yes ☐ No

We hereby certify, that the product has been cleaned thoroughly inside and outside before returning, that it is free from hazardous material (i.e. chemical, biological, toxic, flammable, and radioactive material) and that the lubricant has been drained.

If the manufacturer finds it necessary to carry out further cleaning work, we accept the charge will be made to us.

We assure that the aforementioned information is correct and complete and that the unit is dispatched according to the legal requirements.

Company / address:

Phone:

.....

Fax:

.....

Email:

Customer No.:

Contact person:

Date, Signature:

17 Warranty claim

Warranty claim

Please copy and send it back with the unit!

If the device breaks down within the period of warranty, please return it in a cleaned condition with the complete warranty claim.

Sender

Company: Phone: Date:

Address:

Contact person:

Manufacturer order no.: Date of delivery:

Device type: Serial number:

Nominal capacity / nominal pressure:

Description of fault:.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

Service conditions of the device

Point of use / system designation:.....

.....
.....

Accessories used (suction line etc.):.....

.....
.....
.....
.....

Commissioning (date):

Duty period (approx. operating hours):

Please describe the specific installation and enclose a simple drawing or picture of the chemical feed system, showing materials of construction, diameters, lengths and heights of suction and discharge lines.

18 Index

A

Adapting the power output24

C

Checking the vacuum system24
Cleaning the back-pressure regulator29
Cleaning the vacuum meter31
Commissioning24
Control22
Controls22

D

Device revision9
Dimensioned drawings14
Dimensions14
Disposal of old equipment26
Dosing media
 Prohibited dosing media9

E

EC Declaration of Conformity46
Electrical installation18

F

Fitting the back-pressure regulator29
Functional control31

G

General warnings6

H

Handling instructions
 Marking5
Hazards due to non-compliance with the safety instructions6

I

Information about chlorine6
Installation15
 electrical18
Installation examples20
Installing the device15
Intended purpose9
Intended use9

L

Long-term shut-down26

M

Maintenance27
 Accessories27
 Maintenance intervals27
 Preparing27
Maintenance accessories27
Maintenance kits45

Manual operation23
Minor maintenance:28

N

Notes for the Reader4

O

Operation25

P

Personal protective equipment7
Personnel qualification7
Personnel tasks8
Preparing the system for maintenance27
Product description10
Product warranty9
Prohibited dosing media9

R

Rating plate12

S



Safety6
Scope of delivery10
Short-term shut-down26
Shut-down26
Shutting down in an emergency25
Signal words
 Explanation4
Spare parts34
Specialist staff7
Structure of the device10
Switching on24

T

Technical data13
Test intervals25
Trained electricians7
Trained persons7
Troubleshooting33
Turning on the device24

W

Warnings
 General warnings6
 Marking4
Warning sign
 Explanation4
Warranty claim48
Working in a safety-conscious manner7

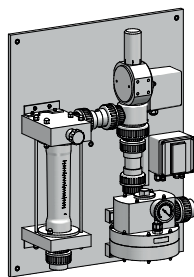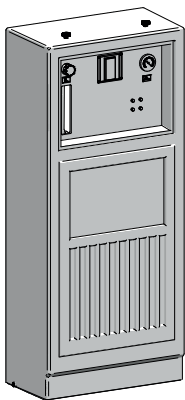

Lutz-Jesco GmbH

Am Bostelberge 19
D-30900 Wedemark

Phone: +49 5130 5802-0
info@lutz-jesco.com
www.lutz-jesco.com

Operating instructions
C 2701